

# **BLUEGIGA BLUETOOTH SMART SOFTWARE**

V.1.3 API DOCUMENTATION

Wednesday, 28 May 2014

Version 3.2



**Copyright © 2001 - 2014 Bluegiga Technologies**

Bluegiga Technologies reserves the right to alter the hardware, software, and/or specifications detailed herein at any time without notice, and does not make any commitment to update the information contained herein. Bluegiga Technologies assumes no responsibility for any errors which may appear in this manual. Bluegiga Technologies' products are not authorized for use as critical components in life support devices or systems.

Bluegiga Access Server, Access Point, APx4, AX4, BSM, iWRAP, BGScript and WRAP THOR are trademarks of Bluegiga Technologies.

The *Bluetooth* trademark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc.

ARM and ARM9 are trademarks of ARM Ltd.

Linux is a trademark of Linus Torvalds.

All other trademarks listed herein belong to their respective owners.

# Table of Contents

1	Version History	5
2	Introduction to Bluetooth Smart SDK	7
2.1	Bluetooth 4.0 single mode stack	7
2.2	BGAPI protocol	8
2.3	BGLib library	9
2.4	BGScript scripting language	9
2.5	Profile Toolkit	11
3	Introduction to Bluetooth Smart	12
3.1	Physical layer	12
3.2	Packet format	13
3.2.1	Generic packet format	13
3.2.2	Advertisement packet format	13
3.2.3	Data packet format	13
3.3	Link layer state machine	15
3.4	Link layer operations	16
3.4.1	Passive scanning	16
3.4.2	Active scanning	17
3.4.3	Connection establishment	17
3.5	Topologies	18
3.6	Connections and packet timings	19
3.7	Encryption	21
3.8	L2CAP	22
3.9	Security Manager	23
3.9.1	I/O capabilities and Man-in-the-Middle (MITM) protection	23
3.10	Attribute Protocol (ATT)	24
3.11	Generic Attribute Profile (GATT)	27
3.12	Generic Access Profile (GAP)	30
4	API definition	31
4.1	BGAPI protocol definition	31
4.1.1	Packet format	31
4.1.2	Message types	31
4.1.3	Command Class IDs	32
4.1.4	Packet Exchange	32
4.1.5	Packet format without the use of HW flow control	33
4.2	BGLib functions definition	34
4.3	BGScript API definition	35
4.4	Data Types	36
5	API Reference	37
5.1	Attribute Client	38
5.1.1	Commands	38
5.1.2	Enumerations	58
5.1.3	Events	59
5.2	Attribute Database	65
5.2.1	Commands	65
5.2.2	Enumerations	71
5.2.3	Events	73
5.3	Connection	76
5.3.1	Commands	76
5.3.2	Enumerations	83
5.3.3	Events	84
5.4	Generic Access Profile	88
5.4.1	Commands	88
5.4.2	Enumerations	105
5.4.3	Events	114
5.5	Hardware	115
5.5.1	Commands	115
5.5.2	Events	140
5.6	Persistent Store	145

5.6.1	Commands	145
5.6.2	Events	153
5.7	Security Manager	155
5.7.1	Commands	155
5.7.2	Enumerations	164
5.7.3	Events	166
5.8	System	170
5.8.1	Commands	170
5.8.2	Enumerations	185
5.8.3	Events	186
5.9	Error Codes	192
5.9.1	BGAPI Errors	192
5.9.2	Bluetooth Errors	193
5.9.3	Security Manager Protocol Errors	194
5.9.4	Attribute Protocol Errors	196
5.10	Device Firmware Upgrade	198
5.10.1	Commands	198
5.10.2	Events	202
5.11	Testing	203
5.11.1	Commands	203

# 1 Version History

Version	
1.3	API documentation for SW version v.1.0.3 (Build 43)
2.0	API documentation for v.1.1.0 beta (Build 46)
2.1	<p>API documentation for v.1.1.0 beta (Build 55)            Note: API changes history is now included here (not separate)            Changed APIs:            * Attribute Database – User Read Response (function implemented for Beta 2)            * Connection – Connection Status Flags (fixed)</p> <p>Doc improved for following APIs:            * Attribute Client – Attribute Value, Indicated, Procedure Completed, Group Found            * Attribute Database – User Read Request            * Generic Access Profile – Discover, Set Adv Parameters            * Hardware – I2c Read, I2c Write, Set Soft Timer, Set Txpower            * Security Manager – Delete Bonding, Get Bonds            * System – Whitelist Append</p> <p>Other sections (outside API reference) has also been updated to improve the document</p>
2.2	<p>Added documentation how to use BGAPI protocol without UART flow control.            Section updated: <a href="#">BGAPI protocol definition</a></p>
2.3	<p>API documentation for v1.1.0 (Build 71+)            * Various typos and wording corrected.</p>
3.0	<p>Documentation updates for SW v1.2 compatibility</p> <p>Changed APIs:</p> <ul style="list-style-type: none"> <li>• Channel quality testing commands added: Get Channel Map and Channel mode</li> <li>• Out of Bonds and Command Too Long error code added</li> <li>• Protocol error event added for indicating the invalid command or wrong length</li> <li>• GAP Discoverable Mode is updated to support the Enhanced Broadcasting.</li> </ul> <p>Doc improved for following APIs/referenses:</p> <ul style="list-style-type: none"> <li>• Updated ADC internal reference to 1.24V (was 1.15V),</li> <li>• GAP - Set Scan Paremeters, Connect Selective, Connect Direct</li> </ul>
3.1	<p>Documentation updates for SW v1.2.2 compatibility</p> <p>Added APIs:</p> <ul style="list-style-type: none"> <li>• Added API's for reading (Read Data), writing (Write Data), and erasing (Erase Page) the user area data on the internal flash memory</li> <li>• Added API's for handling I/O port interrupts (Io Port Irq Enable) and setting the directions (Io Port Irq Direction)</li> <li>• Added testing API's for sending and receiving data (Phy Tx, Phy Rx, Phy End)</li> <li>• Added API's for handling the comparator functionality under HW commands and events.</li> </ul>

Version	
3.2	<p data-bbox="263 190 874 224">Documentation updates for SW v1.3.0 compatibility</p> <p data-bbox="263 250 414 280">Added APIs:</p> <ul data-bbox="311 309 1428 470" style="list-style-type: none"><li data-bbox="311 309 1428 369">• Added Set RXGain API for controlling RX Gain for lowering the sensitivity (Hardware commands)</li><li data-bbox="311 369 1428 430">• Added Usb Enable API for controlling whether USB interface is on or off (Hardware commands)</li><li data-bbox="311 430 1428 470">• Added AES API's for using AES engine for de-/encryptions (System commands)</li></ul>

## 2 Introduction to Bluetooth Smart SDK

Bluegiga's *Bluetooth* Smart SDK suite provides a complete development framework for *Bluetooth* low energy application developers.

The *Bluetooth* Smart SDK supports two architectural modes:

- **Standalone architecture:** All software including: *Bluetooth* 4.0 single mode stack, profiles and end user application all run on the Bluegiga's *Bluetooth* 4.0 single mode hardware.
- **Hosted architecture:** The *Bluetooth* 4.0 single mode stack and profiles run on the Bluegiga 4.0 single mode hardware but the end user application runs on a separate host (a low power MCU).

The benefit of the *Bluetooth* Smart SDK in both use cases is that it provides the user with a complete *Bluetooth* 4.0 single mode stack, so that no *Bluetooth* protocol development is required. A well-defined transport protocol exists between the host and the *Bluetooth* 4.0 stack and also simple development tools are available for embedding the end user applications on the *Bluetooth* 4.0 single mode hardware.

The *Bluetooth* Smart SDK suite consists of several components:

- A *Bluetooth* 4.0 single mode stack
- Binary based communication protocol (BGAPI) between the host and the *Bluetooth* stack
- A C library (BGLib) for the host that implements the BGAPI protocol
- BGScript scripting language and interpreter for implementing applications on the *Bluetooth* Smart mode hardware
- A Profile Toolkit for quick and easy development of GATT based *Bluetooth* services and profiles

### 2.1 Bluetooth 4.0 single mode stack

The *Bluetooth* 4.0 single mode stack is a full, embedded implementation of *Bluetooth* v.4.0 compatible stack software and it's dedicated for Bluegiga's *Bluetooth* 4.0 single mode modules such as the BLE112. The stack implements all mandatory functionality for a single mode device. The structure and layers of the stack are illustrated in the figure below.

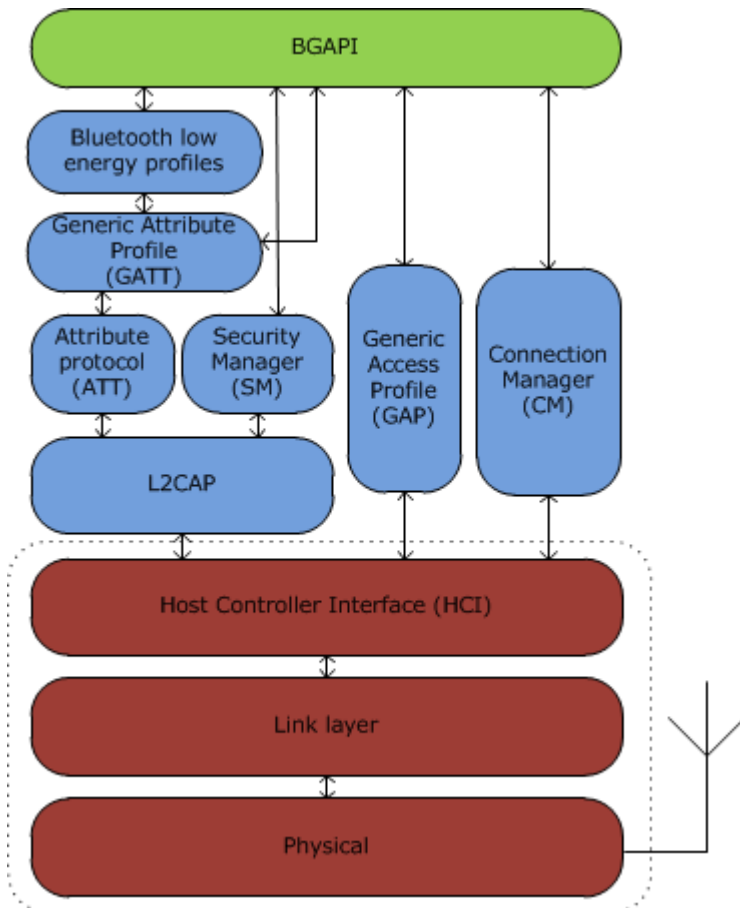


Figure: Bluetooth low energy single mode stack

## 2.2 BGAPI protocol

For applications where a separate host (MCU) is used to implement the end user application, a transport protocol is needed between the host and the *Bluetooth* stack. The transport protocol is used to control with the *Bluetooth* stack as well to transmit and receive data packets. This transport protocol is called BGAPI and it's a binary based communication protocol designed specifically for ease of implementation within host devices with limited resources.

The BGAPI provides access to the following layers:

- **Generic Access Profile** - GAP allows the management of discoverability and connetability modes and open connections
- **Security manager** - Provides access the *Bluetooth* low energy security functions
- **Attribute database** - An class to access the local attribute database
- **Attribute client** - Provides an interface to discover, read and write remote attributes
- **Connection** - Provides an interface to manage *Bluetooth* low energy connections
- **Hardware** - An interface to access the various hardware layers such as timers, ADC and other hardware interfaces
- **Persistent Store** - User to access the parameters of the radio hardware and read/write data to non-volatile memory
- **System** - Various system functions, such as querying the hardware status or reset it

The BGAPI protocol is intended to be used over a serial UART link or over a USB connection depending on which physical transport layers are supported by a *Bluetooth* Smart device.



## 2.3 BGLib library

For easy implementation of the BGAPI protocol a host library is available refer as BGLib. This library is easily portable ANSI C code delivered within the *Bluetooth* Smart SDK. The purpose is to simplify the application development to various host environments.


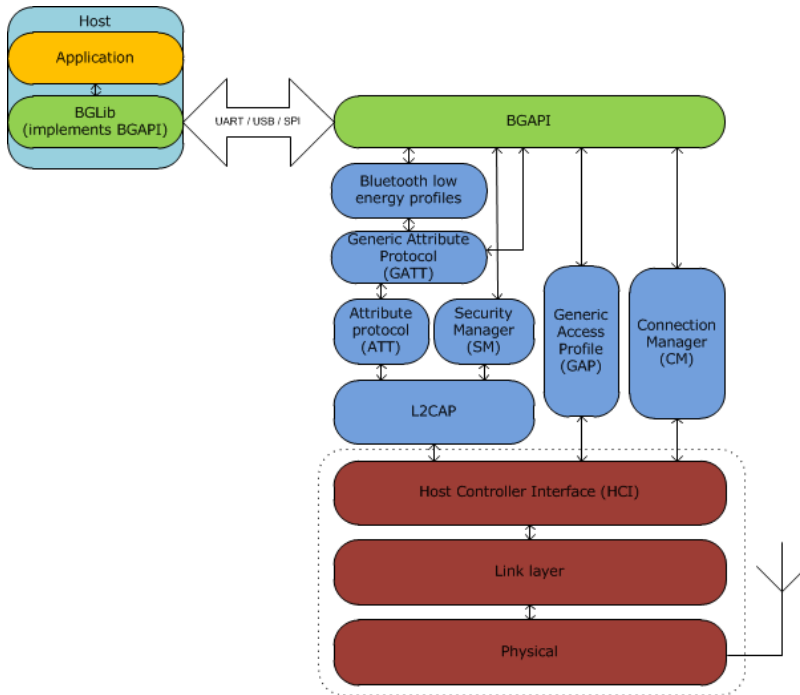


Figure: Host using BGLib

## 2.4 BGScript scripting language

Bluegiga's *Bluetooth* Smart mode products allow application developers to create standalone devices without the need of a separate host. The *Bluetooth* Smart modules can run simple applications along the *Bluetooth* 4.0 single mode stack and this provides a benefit when one needs to minimize the end product size, cost and current consumption. For developing standalone *Bluetooth* Smart applications the development suite provides a simple BGScript scripting language. With BGScript provides access to the same software and hardware interfaces as the BGAPI protocol. The BGScript code can be developed and compiled with free tools provided by Bluegiga.

When the BGScript approach is used the BGAPI host interface is not needed nor is it available.

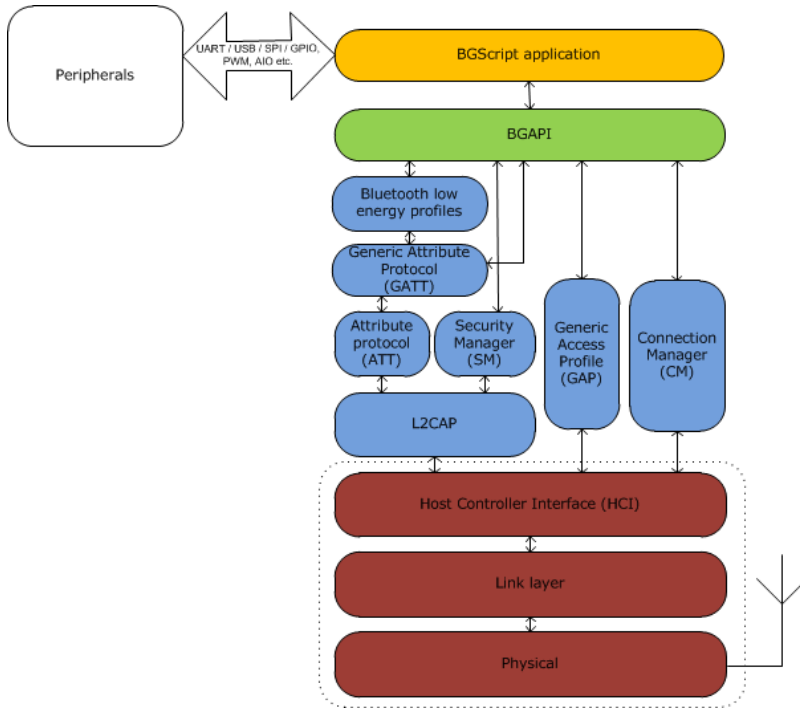

**Figure: Standalone application model**

**A BGScript code example:**

```
# System Started
event system_boot(major, minor, patch, build, ll_version, protocol_version, hw)

#Enable advertising mode
call gap_set_mode(gap_general_discoverable,gap_undirected_connectable)

#Enable bondable mode
call sm_set_bondable_mode(1)

#Start timer at 1 second interval (32768 = crystal frequency)
call hardware_set_soft_timer(32768)
end
```

## 2.5 Profile Toolkit

The *Bluetooth* low energy profile toolkit a simple set of tools, which can used to create GATT based *Bluetooth* services and profiles. The profile toolkit consists of a simple XML based service description language template, which describes the devices local GATT database as a set of services. The profile toolkit also contains a compiler, which converts the XML to binary format and generates API to access the characteristic values.

```
<?xml version="1.0" encoding="UTF-8" ?>
<configuration>

  <service uuid="1800">
    <description>Generic Access Profile</description>

    <characteristic uuid="2a00">
      <properties read="true" const="true" />
      <value>BGDemo sensor</value>
    </characteristic>

    <characteristic uuid="2a01">
      <properties read="true" const="true" />
      <value type="hex">4142</value>
    </characteristic>
  </service>

</configuration>
```

Figure: A profile toolkit example of GAP service

### 3 Introduction to Bluetooth Smart

This section gives a quick introduction to *Bluetooth* Smart technology and its most important features. The chapter does not contain complete detailed technology walkthrough but gives developers more insight into the technology and to help them develop *Bluetooth* Smart applications.

#### 3.1 Physical layer

The features of physical the layer in *Bluetooth* low energy are:

Feature	Value
Frequency band	2.4GHz (2402Mhz - 2480MHz)
Modulation	GFSK, 1 Mbps
Modulation index	0.5
Channel spacing	2 MHz
Advertising channels	3
Data channels	37
Frequency hopping	Adaptive FHSS

The requirements for the *Bluetooth* low energy radio are:

Feature	Value
Minimum TX power	0.01mW (-20 dBm)
Maximum TX power	10 mW (10 dBm)
Minimum RX sensitivity	-70 dBm (BER 0.1%)

The typical range for *Bluetooth* low energy radios is:

TX power	RX sensitivity	Range
0 dBm	-70 dBm	~30 meters
10 dBm	-90 dBm	100+ meters

The figure below illustrates the link layer channels. There are 37 data channels and 3 advertisement channels.

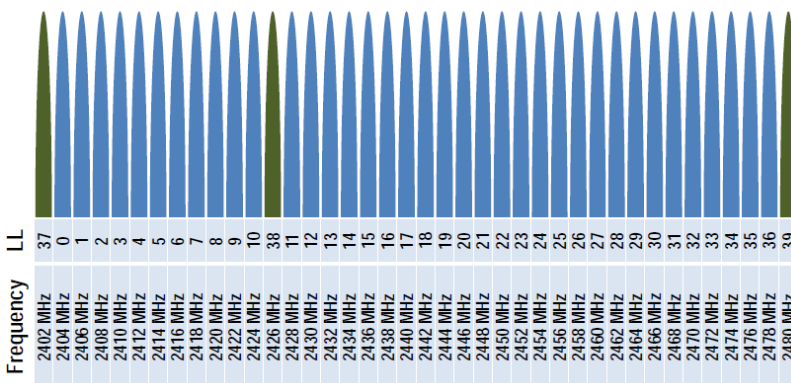


Figure: Link layer channels

## 3.2 Packet format

### 3.2.1 Generic packet format

*Bluetooth* low energy has one generic packet format used for both advertisement and data packets.

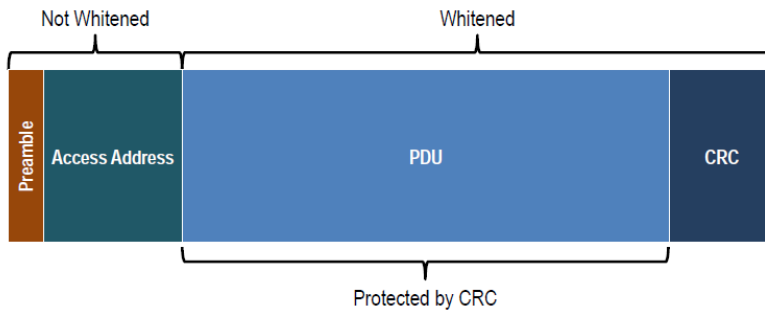


Figure: Generic packet format

- **Preamble:** either 010101010 or 101010101
- **Access address:** advertisement packets use a fixed access address of 0x8E89BED6. Data packets use a random access address depending on the connection.
- **PDU:** protocol data unit depends on the packet type.
- **CRC:** a 24-bit CRC checksum is used to protect the PDU.

### 3.2.2 Advertisement packet format

The advertisement packets use the following structure and can contain 0 to 31 bytes of advertisement data.

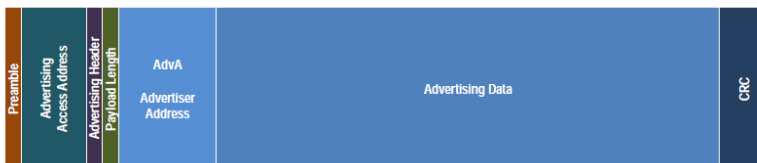


Figure: Advertisement packet structure

### 3.2.3 Data packet format

The data packets on the other hand use the following structure. An unencrypted data packet can have 0 to 27 bytes of payload.


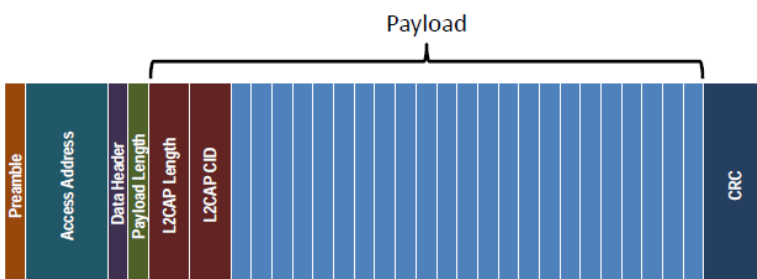


Figure: Unencrypted data packet


An encrypted data packet can have 0 to 31 bytes of payload length, but MIC (Message Integrity Check) is part of it.

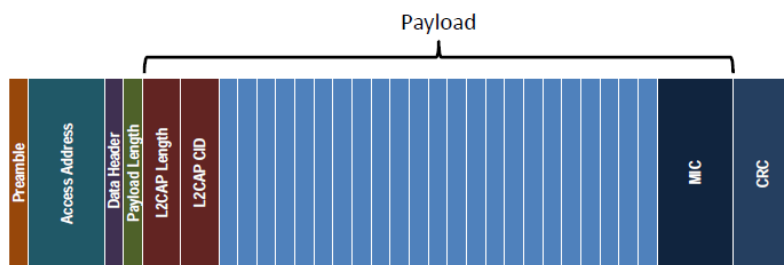

**Figure: Encrypted data packet**

### 3.3 Link layer state machine

The *Bluetooth* low energy link layer state machine and state transitions are illustrated in the figure below.

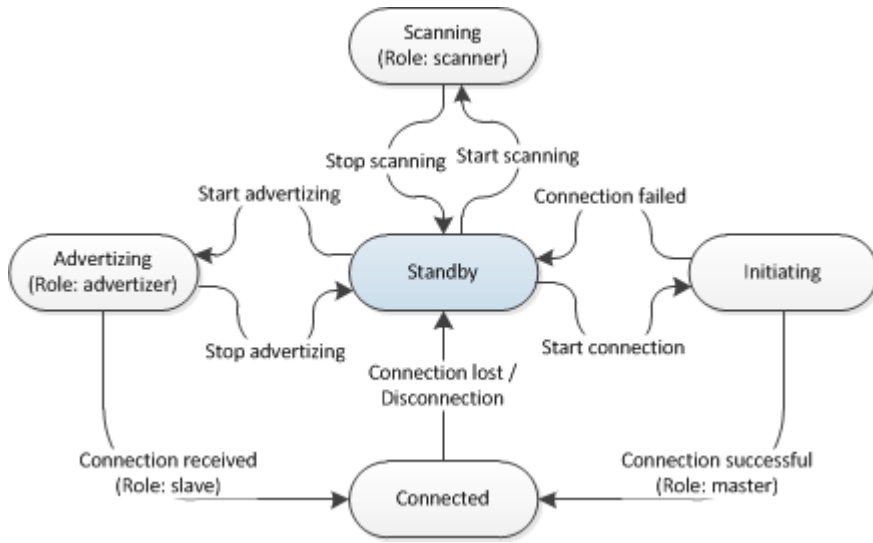

**Figure: Link layer state machine and state transitions**

### 3.4 Link layer operations

This section describes the *Bluetooth* low energy link layer operations.


#### 3.4.1 Passive scanning

In passive scanning mode the advertiser simply broadcasts advertisement packets and a scanner and listen to incoming advertisements.

Typically in passive scanning scenario:

- Advertiser sends three advertisement packet one on each advertisement channel separated by 150us.
- Scanner only listens to one advertisement channel at a time, but keeps switching between the three advertisement channels.

The advertisement events are separated by a time called advertisement interval, which can vary from 20ms to 10240ms. On addition a random delay is added to the advertisement interval to avoid interference with other devices.

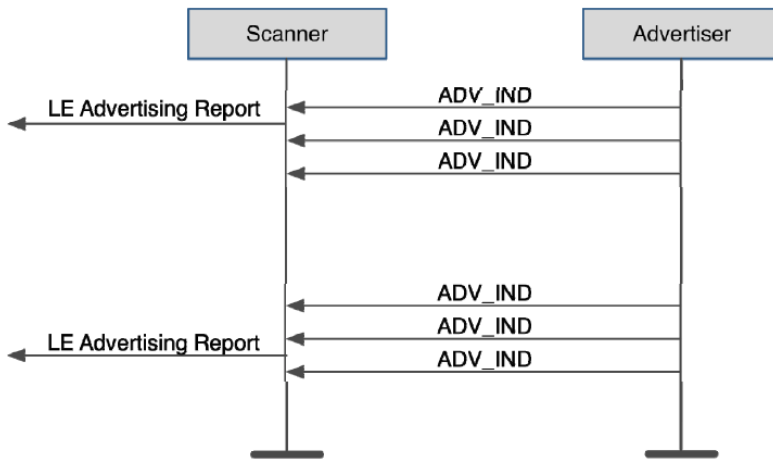

**Figure: Passive scanning**

The advertisement packets typically contains information like:

- Discoverability and connectability modes
- The address of advertiser
- TX power level
- Supported services
- Application data



### 3.4.2 Active scanning

In active scanning mode the scanner will request more information from the Advertiser after it has received an advertisement packet.

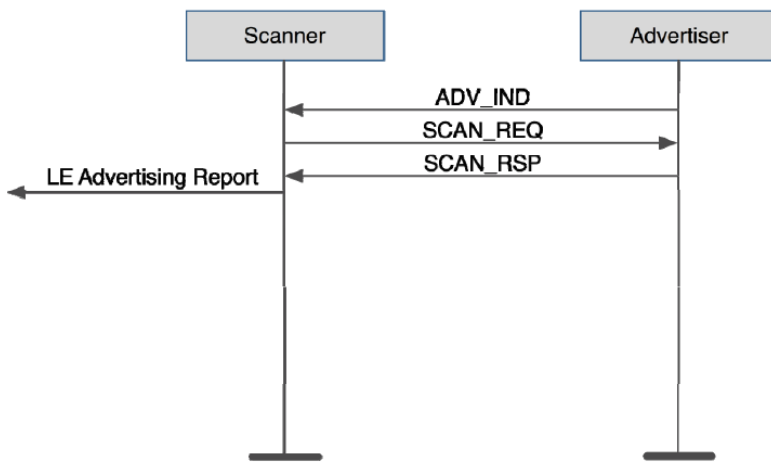


Figure: Active scanning The scan response packets typically contains information like:

- Device friendly name
- Supported services (profiles)

### 3.4.3 Connection establishment

The figure below illustrates how the connection establishment happens at the link layer level.

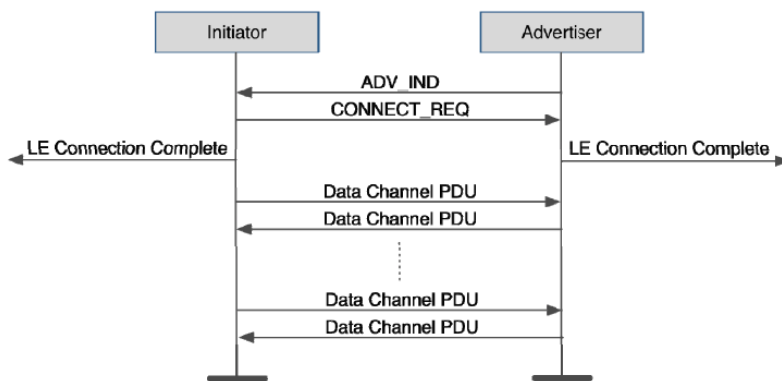


Figure: Bluetooth low energy connection establishment

### 3.5 Topologies

Bluetooth low energy has four device roles: advertiser, scanner, master and slave. The technology supports point-to-point and star topologies. The figure below illustrates the device roles, and topologies.

- **Advertiser** : Broadcasts advertisement packets, but is not able to receive them
- **Scanner** : Listens for advertisement packets sent out by advertisers. Can try to connect an advertiser.
- **Master** : A device that is connected to one or several slaves
- **Slave** : A device that is connected to a master. Can only be connected to one master at a time


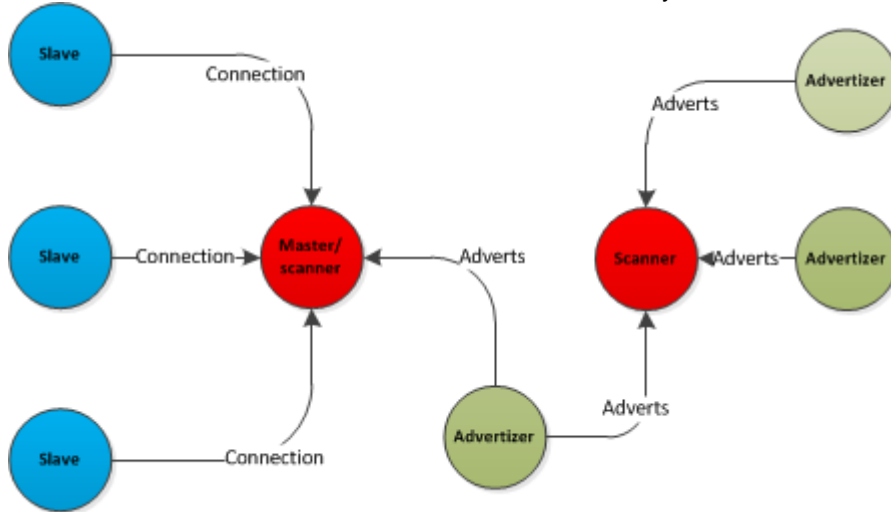


Figure: Bluetooth low energy topologies. Devices can change roles and topologies as illustrated

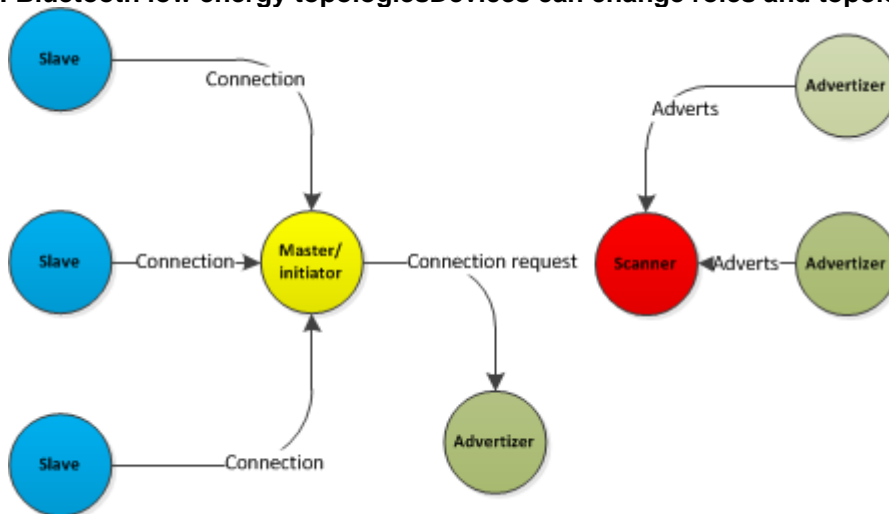

below.

Figure: Topology and role change

### 3.6 Connections and packet timings


Connections allow application data to be transmitted reliably and robustly. The data sent in a connection can be acknowledged, integrity is protected by CRC and to protect privacy the data can also be encrypted. On addition the Adaptive Frequency Hopping (AFH) guarantees reliable data transmission even in noisy environments.

In *Bluetooth* Smart technology the connection procedures are very simple and connections are always starts when master sends a connection request packet to the slave. The connection request packet can only be sent right after a successful reception of an advertisement packet. The connection request packet contains the following information:

Parameter	Description
Conn_Interval_Min	Minimum value for the connection event interval <b>Range: 7.5 ms to 4000ms</b>
Conn_Interval_Max	Maximum value for the connection event interval <b>Range: 7.5 ms to 4000ms</b> Shall be greater then Conn_Interval_Min
Conn_Latency	Slave latency for the connection in number of connection events. Slave latency allows the slave devices to skip a number of connection events in case it does not have any data to send. <b>Range: 0 to 500</b>
Supervision_Timeout	Supervision timeout <b>Range: 100ms to 32 seconds</b> Shall be greater than Connection Interval

The connection parameters can be updated during the connection.


The connection timeline and events are illustrated below.

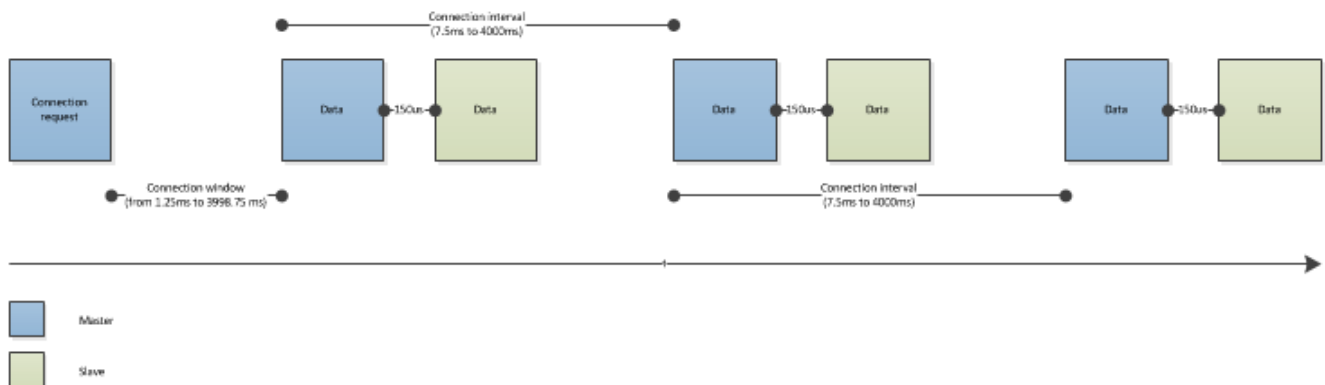

**Figure: Bluetooth LE connection**

The connection event starts, when master sends a packet to the slave at the defined connection interval. The slave can respond 150us after it has received a packet from the master. However if the slave has no data to send it can skip a certain number of connection events defined by the slave latency parameter. If no packets are received by the master or slave within the time defined by the supervision timeout, the connection is terminated.

If the slave has more data to send than what can be fitted into a single packet, the connection event will automatically extend and the slave can send as many packets as there is time until the beginning of next connection interval. This however can only be used with attribute protocol operations, that do not require an acknowledgement.

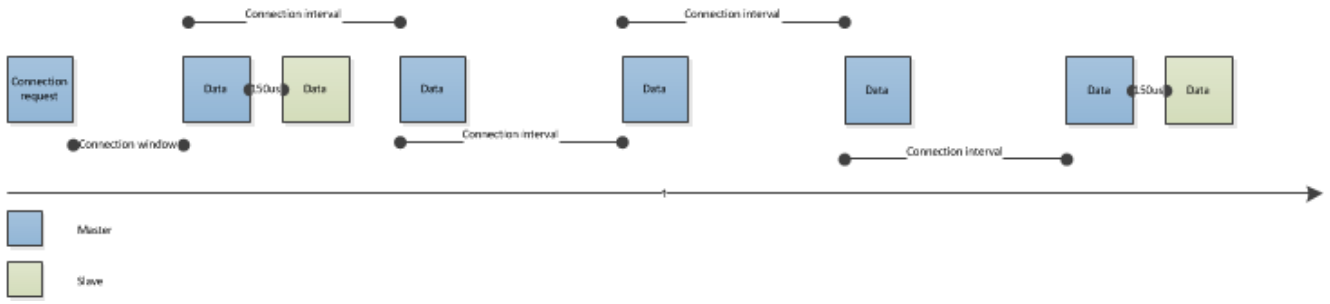

**Figure: Slave latency in function (latency=3)**

### 3.7 Encryption

Bluetooth low energy uses AES-128 link layer encryption block with Counter Mode CBC MAC (defined in RFC 3610).

The data packets are encrypted as show below.

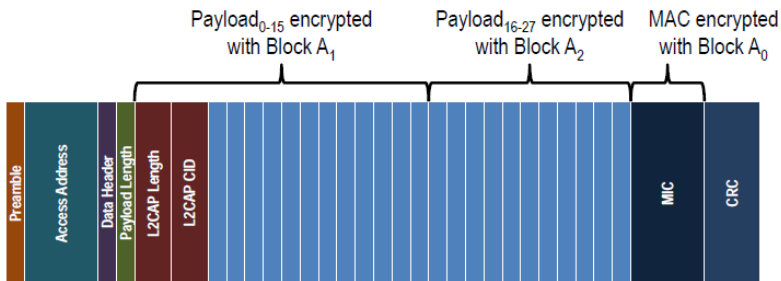


Figure: Encrypted data packet

The full AES encryption procedure is illustrated below.

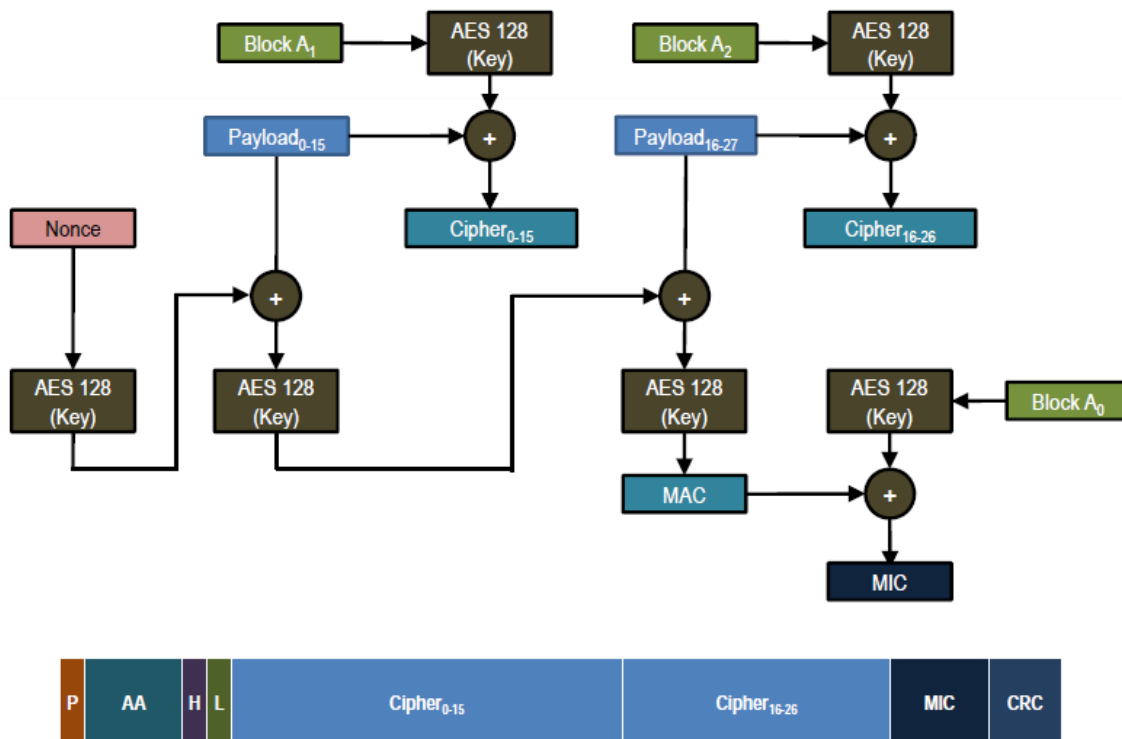


Figure: AES encryption procedure

#### Limitations of link layer encryption

- Maximum 2<sup>39</sup> packets per Long Term Key (LTK)
  - 13.7 TB of data / connection
  - ~12 years at maximum data rate

### 3.8 L2CAP

L2CAP stands for Logical Link Control and Adaptation Protocol and it acts as a protocol multiplexer and handles segmentation and reassembly of packets. It also provides logical channels, which are multiplexed over a or more logical links.

All application data is sent over L2CAP packets and the L2CAP structure is illustrated below.



**Figure: L2CAP packet format**

The following CIDs are defined:

CID	Description	Notes
0x0000	Null identifier	Not used
0x0001	L2CAP Signaling Channel	BR/EDR only
0x0002	Connectionless Channel	BR/EDR only
0x0003	AMP Manager Protocol	BR/EDR only
0x0004	Attribute Protocol	LE only
0x0005	LE L2CAP Signaling Channel	LE only
0x0006	Security Manager Protocol	LE only

### 3.9 Security Manager

The security manager protocol is responsible of:

- Pairing
- Key distribution
- Generating hashes and short term keys

The security manager uses asymmetric model and more responsibility is given to the master device, so the memory and processing requirements on the slaves can be kept to minimum.

The basic security manager concepts include:

- **Distributing key model**  
Slave generates and distributes key information to master  
Master can use this key information when reconnecting
- **Pairing**  
Authentication of devices based on their capabilities and security requirements
- **Signing Data**  
Signing allows authentication of sender without encryption
- **Bonding**  
GAP concept – device save keys for bonded devices

Three pairing methods are supported:

- Just works pairing, similar to *Bluetooth 2.1 + EDR*
- Man-in-the-Middle pairing using a passkey entry or comparison, similar to *Bluetooth 2.1 + EDR*
- Out-of-band pairing, where security keys are exchanged over an other medium like NFC

#### 3.9.1 I/O capabilities and Man-in-the-Middle (MITM) protection

Same I/O capabilities and MITM features are supported as in *Bluetooth 2.1 + EDR*.

	No Input	Yes / No	Keyboard
No Output	No Input No Output	No Input No Output	Keyboard Only
Numeric Output	Display Only	Display Yes No	Keyboard Display


Figure: I/O capabilities

### 3.10 Attribute Protocol (ATT)

Bluetooth low energy profiles expose a state of a device. The state is exposed as one or several values called attributes and the protocol to access these attributes is called the Attribute protocol (ATT).

The attribute protocol uses a client server architecture and has two roles:

- **Server**  
Service is the device that exposes the information as one or several attributes
- **Client**  
Client device that collects the information for one or more servers

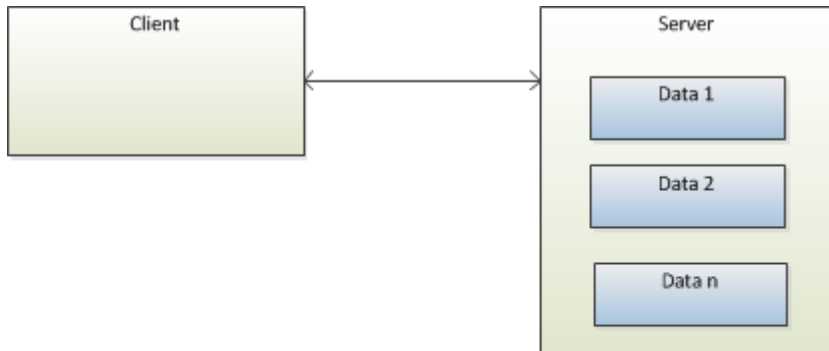

**Figure: Device roles**

**Attribute types:**

Attributes are values:

- Arrays of octets
- From 0 to 512 octets
- Can be fixed or variable length

**Example:**

Value
0x0000
0x426c75656769676120546563686e6f6c6f67696573

Attributes have handles, which are used to address an individual attribute. The client accesses the server's attributes using this handle.

**Example:**

Handle	Value
0x0001	0x0000
0x0002	0x426c75656769676120546563686e6f6c6f67696573

Attributes also have a type, described by a UUID. UUID determines what the attribute value means.



Two types of UUIDs are used:

- Globally unique 16-bit UUID defined in the characteristics specifications (<http://developer.bluetooth.org/>)
- Manufacturer specific 128-bit UUIDs, which can for example be generated online. (<http://www.uuidgenerator.com/>)

**Example:**

Handle	UUID	Value	Description
0x0001	0x1804	0x0000	TX power as dBm
0x0002	0x2a00	0x426c75656769676120546563686e6f6c6f6769657	Device name, UTF-8

**Attribute permissions:**

Attributes also have permissions, which can be:

- Readable / Not readable
- Writable / Not writable
- Readable and writable / Not readable and not writable

The attributes may also require:

- Authentication to read or write
- Authorization to read or write
- Encryption and pairing to read or write

The attribute types and handles are public information, but the permissions are not. Therefore and read or write request may result an error *Read/Write Not Permitted* or *Insufficient authentication*.

### Attribute protocol methods:


The attribute protocol is a stateless sequential protocol, meaning that no state is stored in the protocol and only one operation can be performed at a time.

The available Attribute Protocol methods are described in the table below:

Method	Description	Direction
Find Information (starting handle, ending handle)	Used to discover attribute handles and their types (UUIDs)	Client -> Server
Find By Type Value (starting handle, ending handle, type, value)	Returns the handles of all attributes matching the type and value	Client -> Server
Read By Group Type (starting handle, ending handle, type)	Reads the value of each attribute of a given type in a range	Client -> Server
Read By Type (starting handle, ending handle, type)	Reads the value of each attribute of a given type in a range	Client -> Server
Read (handle)	Reads the value of given handle <b>Maximum payload : 22 bytes</b>	Client -> Server
Read Blob (handle, offset)	Can be used to read long attributes larger than 22 bytes. <b>Maximum payload: 64 kBytes</b>	Client -> Server
Read Multiple ([Handle]*)	Used to read multiple values at the same time	Client -> Server
Write (handle, value)	Writes the value to the given handle, with no response <b>Maximum payload: 20 bytes</b>	Client -> Server
Prepare Write (handle, offset, value) and Execute (exec/cancel)	Prepares a write procedure, which is queued in server until the write is executed.	Client -> Server
Handle Value Notification (handle, value)	Server notifies client of an attribute with a new value <b>Maximum payload: 20 bytes</b>	Server -> Client
Handle Value Indication (handle, value)	Server indicates to client an attribute with a new value. Client must confirm reception. <b>Maximum payload: 20 bytes</b>	Server -> Client
Error response	Any request can cause an error and error response contains information about the error	Server -> Client

### 3.11 Generic Attribute Profile (GATT)

The Generic Attribute profile (GATT) has similar client server structure as Attribute Protocol. However the GATT encapsulates data (attributes) into *services* and the data is exposed as *characteristics*.

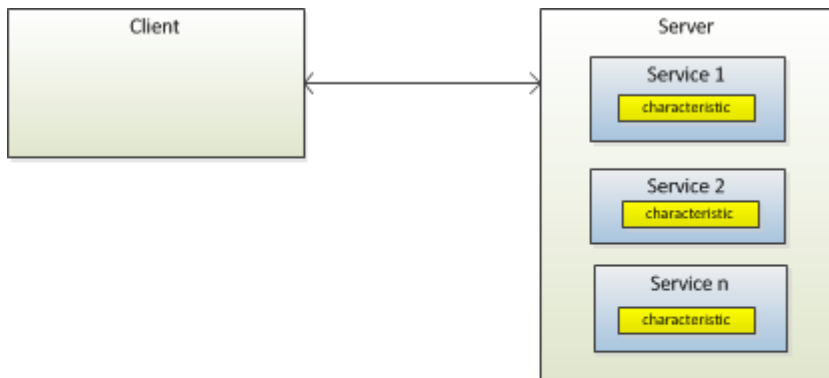

**Figure: GATT architecture**

GATT defines concepts of:

- Service Group
- Characteristic Group
- Declarations
- Descriptors


It's important also to understand that GATT does not define rules for their use.

#### Characteristics

Characteristic is a value, with a known type, and a known format. They characteristics are defined in "Characteristic Specification" available at <http://developer.bluetooth.org>.

Characteristics consist of:

- Characteristic Declaration  
Describes the properties of *characteristic value* (read, write, indicate etc.), *characteristic value* handle and *characteristic value* type (UUID)
- Characteristic Value  
Contains the value of the characteristic.
- Characteristic Descriptor(s)  
Provide additional information about the characteristic (characteristic user description, characteristic client configuration, vendor specific information etc.)

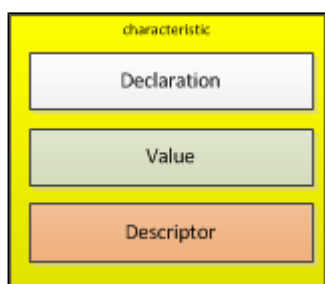

**Figure: Characteristic format**

## Service

A service is:

- defined in a service specification (<http://developer.bluetooth.org>)
- collection of characteristics
- references to other services

There are two types of service:

- Primary services  
A primary service exposes primary functionality of a device. It can be included by an other service.
- Secondary services  
Secondary service is a subservient of another primary or a secondary service. It's only relevant in the context of an other service.

Attributes alone are just flat:

Handle	Type	Value	Permissions
0x0001	«Primary Service»	«GAP»	R
0x0002	«Characteristic»	{r, 0x0003, «Device Name»}	R
0x0003	«Device Name»	"Temperature Sensor"	R
0x0004	«Characteristic»	{r, 0x0006, «Appearance»}	R
0x0006	«Appearance»	«Thermometer»	R
0x000F	«Primary Service»	«GATT»	R
0x0010	«Characteristic»	{r, 0x0012, «Attribute Opcodes Supported»}	R
0x0012	«Attribute Opcodes Supported»	0x00003FDF	R
0x0020	«Primary Service»	«Temperature»	R
0x0021	«Characteristic»	{r, 0x0022, «Temperature Celsius»}	R
0x0022	«Temperature Celsius»	0x0802	R*

**Figure: List of attributes**

Grouping attributes into services gives structure:

Handle	Type	Value	Permissions
0x0001	«Primary Service»	«GAP»	R
0x0002	«Characteristic»	{r, 0x0003, «Device Name»}	R
0x0003	«Device Name»	"Temperature Sensor"	R
0x0004	«Characteristic»	{r, 0x0006, «Appearance»}	R
0x0006	«Appearance»	«Thermometer»	R
0x000F	«Primary Service»	«GATT»	R
0x0010	«Characteristic»	{r, 0x0012, «Attribute Opcodes Supported»}	R
0x0012	«Attribute Opcodes Supported»	0x00003FDF	R
0x0020	«Primary Service»	«Temperature»	R
0x0021	«Characteristic»	{r, 0x0022, «Temperature Celsius»}	R
0x0022	«Temperature Celsius»	0x0802	R*

**Figure: Attributes grouped into services**

## GATT procedures

The available Attribute Protocol methods are described in the table below:

Procedure	Sub-Procedures
Server Configuration	Exchange MTU
Primary Service Discovery	Discovery All Primary Service Discover Primary Service by Service UUID.
Relationship Discovery	Find Included Services
Characteristic Discovery	Discover All Characteristics of a Service Discover Characteristics by UUID
Characteristic Descriptor Discovery	Discover All Characteristic Descriptors
Characteristic Value Read	Characteristic Value Read Read Characteristic Value Read Using Characteristic UUID Read Long Characteristic Values Read Multiple Characteristic Values
Characteristic Value Write	Write Without Response Write Without Response With Authentication Write Characteristic Value Write Long Characteristic Values Reliable Writes
Characteristic Value Notifications	Notifications
Characteristic Value Indications	Indications
Characteristic Descriptors	Read Characteristic Descriptors Read Long Characteristic Descriptors Write Characteristic Descriptors Write Long Characteristic Descriptors

## 3.12 Generic Access Profile (GAP)

GAP defines device roles:

- **Broadcaster** : Sends advertising events, including characteristics, including service data (does not need RX)
- **Observer** : Receives advertising events, listens for characteristics, listens for service data (does not need TX)
- **Peripheral** : Has RX and TX, is always slave, is connectable and advertising
- **Central** : Has RX and TX, is always master, never advertises

GAP also defines modes and procedures for

- Discovery
- Connections
- Bonding

Privacy

- Non-Resolvable and Resolvable Private Addresses

## 4 API definition

This section contains the generic *Bluetooth* low energy stack API definition. The definition consist of three parts:

- The BGAPI protocol definition
- The BGLib C library description
- The BGScript scripting API description

This section of the document only provides the generic definition and description of the API and the actual commands, responses and event are described in the API reference section.

### 4.1 BGAPI protocol definition

The general format of the binary host protocol is described in this section.

⊖ The maximum allowed packet size transferred to the stack is 64 bytes, which leads to the maximum payload of 60 bytes.

#### 4.1.1 Packet format

Packets in either direction use the following format.

**Table: BGAPI packet format**

Octet	Octet bits	Length	Description	Notes
Octet 0	7	1 bit	<b>Message Type (MT)</b>	0: Command/Response 1: Event
...	6:3	4 bits	<b>Technology Type (TT)</b>	0000: Bluetooth 4.0 single mode 0001: Wi-Fi
...	2:0	3 bits	<b>Length High (LH)</b>	Payload length (high bits)
Octet 1	7:0	8 bits	<b>Length Low (LL)</b>	Payload length (low bits)
Octet 2	7:0	8 bits	<b>Class ID (CID)</b>	Command class ID
Octet 3	7:0	8 bits	<b>Command ID (CMD)</b>	Command ID
Octet 4-n	-	0 - 2048 Bytes	<b>Payload (PL)</b>	Up to 2048 bytes of payload

#### 4.1.2 Message types

The following message types exist in the BGAPI protocol.

**Table: BGAPI message types**

Message type	Value	Description
Command	0x00	Command from host to the stack
Response	0x00	Response from stack to the host
Event	0x80	Event from stack to the host

### 4.1.3 Command Class IDs

The following command classes exist.


**Table: BGAPI command classes**

Class ID	Description	Explanation
0x00	System	Provides access to system functions
0x01	Persistent Store	Provides access the persistence store (parameters)
0x02	Attribute database	Provides access to local GATT database
0x03	Connection	Provides access to connection management functions
0x04	Attribute client	Functions to access remote devices GATT database
0x05	Security Manager	Bluetooth low energy security functions
0x06	Generic Access Profile	GAP functions
0x07	Hardware	Provides access to hardware such as timers and ADC

### 4.1.4 Packet Exchange

The BGAPI protocol is a simple command / response protocol.

- The host should wait for the response to a command before issuing another command.

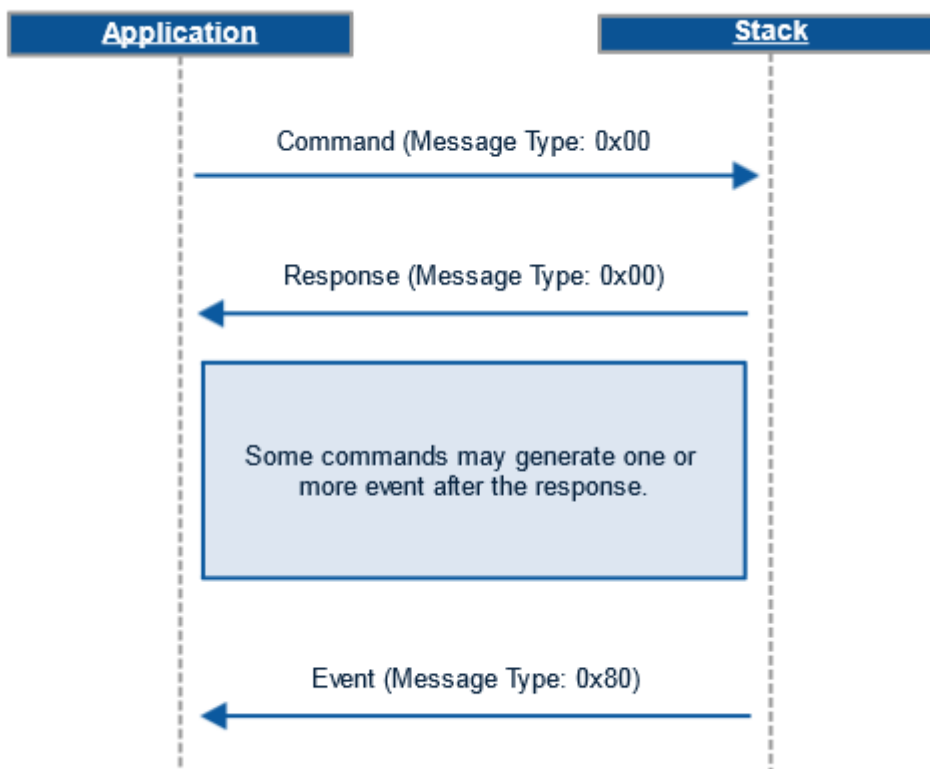



### 4.1.5 Packet format without the use of HW flow control

BGAPI protocol can also be used without UART hardware (RTS/CTS) flow control. Typically this is not possible, because UART buffer overflow can cause a loss of data and it could cause the loss of synchronization between the *Bluetooth* smart stack and the host, especially if the BGAPI header bytes are lost because of buffer overflow.

BGAPI however has an alternate mode where, which allows the use of BGAPI over a simple 2-wire (TX and RX) UART interface. This however requires that an additional **length byte** is added in front of all the BGAPI protocol commands, which tells the total length of the BGAPI command excluding the length byte itself.

This operational mode needs to be especially enabled in the hardware configuration (**hardware.xml**) of your Bluetooth Smart project and is not used by default.

In this case the BGAPI protocol has the following format:

**Table: BGAPI packet format**

Octet	Octet bits	Length	Description	Notes
Octet 0	7:0	8 bits	<b>BGAPI command length</b>	Tells the length of the BGAPI command excluding the length byte itself  Range of this octet is 4 - 62
Octet 1	7	1 bit	<b>Message Type (MT)</b>	0: Command/Response 1: Event
...	6:3	4 bits	<b>Technology Type (TT)</b>	0000: Bluetooth 4.0 single mode 0001: Wi-Fi
...	2:0	3 bits	<b>Length High (LH)</b>	Payload length (high bits)
Octet 2	7:0	8 bits	<b>Length Low (LL)</b>	Payload length (low bits)
Octet 3	7:0	8 bits	<b>Class ID (CID)</b>	Command class ID
Octet 4	7:0	8 bits	<b>Command ID (CMD)</b>	Command ID
Octet 5-n	-	0 - 2048 Bytes	<b>Payload (PL)</b>	Up to 2048 bytes of payload

Below is a simple example which shows how a **System Get Info** (Raw: 0x00 0x00 0x00 0x08) is sent in this BGAPI packet format.



## 4.2 BGLib functions definition

All the BGAPI commands are also available as ANSI C functions as a separate host library called BGLib. The responses and event on the other hand are handled as function call backs. The ANSI C functions are also documented in the API reference section.

The functions and callbacks are documented as follows:

### C Functions


```
/* Function */
void ble_cmd_gap_connect_direct(
    bd_addr address ,
    uint8 addr_type ,
    uint16 conn_interval_min ,
    uint16 conn_interval_max ,
    uint16 timeout
);

/* Callback */
void ble_rsp_gap_connect_direct(
    uint16 result ,
    uint8 conn
);
```

The command parameters and return values are the same as used in the BGAPI binary protocol and they are not documented separately.

### Callback programming

Callback programming is a style of computer programming, which allows lower layer of software to call functions defined on a higher layer. Callback is piece of code or a reference to a piece of code that is passed as an argument. The figure below illustrates the callback architecture used with BGLib.

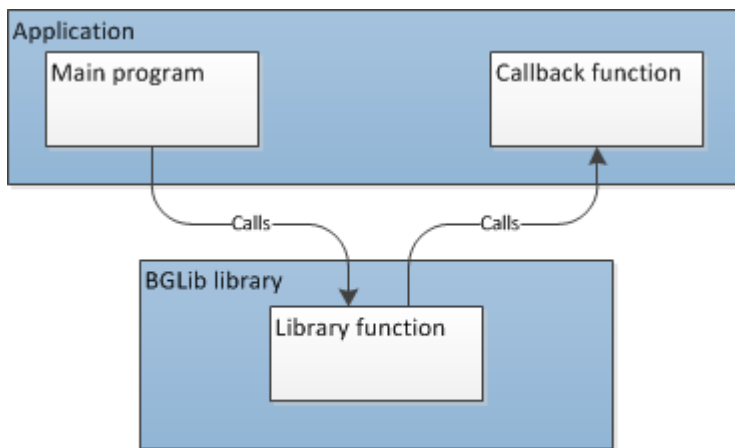

**Figure: Callback architecture**

If you are not familiar with callback programming a basic tutorial can for example be found from here:

[http://www.codeguru.com/cpp/cpp/cpp\\_mfc/callbacks/article.php/c10557](http://www.codeguru.com/cpp/cpp/cpp_mfc/callbacks/article.php/c10557)

## 4.3 BGScript API definition

The BGScript functions are also documented in the API reference section. The format of the commands varies slightly from the C-library functions and instead of using call backs the BGScript functions take the return values as parameters.

BGScript commands are documented as follows:

### BGScript Functions

```
CALL gap_connect_direct(address ,addr_type ,conn_interval_min ,conn_interval_max ,timeout )(result ,conn )
```

The BGScript command parameters and return values are the same as used in the BGAPI binary protocol and they are not documented separately.

## 4.4 Data Types

The following data types used in documentation.

**Table: Used data types**

Type	Description	Example: Human readable	Example Packet data in hex
<b>int8</b>	signed integer stored in 1 byte twos complement form	-42	0xd6
<b>uint8</b>	unsigned integer stored in 1 byte	42	0x2a
<b>uint16</b>	unsigned integer stored in 2 bytes little endian format	1701	0xa5 0x06
<b>uint32</b>	unsigned integer stored in 4 bytes little endian format	1000000	0x40 0x42 0x0f 0x00
<b>uint8array</b>	byte array, first byte is array size	"Hello"	0x05 0x68 0x65 0x6c 0x6c 0x6f
<b>bd_addr</b>	Bluetooth address in little endian format	00:07:80:c0:ff:ee	0xee 0xff 0xc0 0x80 0x07 0x00

## 5 API Reference

This section of the document contains the actual API description, so the description of commands, responses, events and enumerations. The high level categorization is made based on the command classes, which are:

Description	Explanation
System	Provides access to system functions
Persistent Store	Provides access the persistence store (parameters)
Attribute database	Provides access to local GATT database
Connection	Provides access to connection management functions
Attribute client	Functions to access remote devices GATT database
Security Manager	Bluetooth low energy security functions
Generic Access Profile	GAP functions
Hardware	Provides access to hardware such as timers and ADC

Final section of the API reference contains description of the error codes categorized as follows:

Description
BGAPI errors
Bluetooth errors
Security manager errors
Attribute protocols errors

## 5.1 Attribute Client

The Attribute Client class implements the Attribute Protocol (ATT) and provides access to the ATT protocol methods. The Attribute Client can be used to discover services and characteristics from ATT server, read and write values and manage indications and notifications.

### 5.1.1 Commands

Attribute Client commands

#### Attribute Write

Writes a remote attribute's value with given handle and value. This Attribute Write operation will be acknowledged by the remote host subsystem, telling the write was successful. Acknowledgement should happen within 30 seconds from the Write operation (otherwise connection is dropped) and is revealed by the event "[attclient\\_procedure\\_completed](#)".

Attribute write can be used to write attribute values up to 20 bytes.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x04	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x05	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>atthandle</b>	Attribute handle to write to
7	<b>uint8array</b>	<b>data</b>	Attribute value

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x05	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>result</b>	0 : write was successful Otherwise error occurred

**Table: EVENTS**

Event	Description
<a href="#">attclient_procedure_completed</a>	Write operation has been acknowledged by remote end

## C Functions

```
/* Function */
void ble_cmd_attclient_attribute_write(
    uint8 connection,
    uint16 atthandle,
    uint8 data_len,
    const uint8* data_data
);

/* Callback */
struct ble_msg_attclient_attribute_write_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_attclient_attribute_write(
    const struct ble_msg_attclient_attribute_write_rsp_t * msg
)
```

## BGScript Functions

```
call attclient_attribute_write(connection, atthandle, data_len, data_data)(connection, result)
```

## Execute Write

Executes or Cancels previously queued prepare\_write commands on remote host

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x0A	method	Message ID
4	uint8	connection	Connection Handle
5	uint8	commit	1 - commits queued writes, 0- cancels

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x0A	method	Message ID
4	uint8	connection	Connection Handle
5 - 6	uint16	result	Command result

**Table: EVENTS**

Event	Description
attclient_procedure_completed	Write operation has been acknowledged by remote end

### C Functions

```
/* Function */
void ble_cmd_attclient_execute_write(
    uint8 connection,
    uint8 commit
);

/* Callback */
struct ble_msg_attclient_execute_write_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_attclient_execute_write(
    const struct ble_msg_attclient_execute_write_rsp_t * msg
)
```

### BGScript Functions

```
call attclient_execute_write(connection, commit)(connection, result)
```



## Find By Type Value

Used to find specific attributes. Returns the handles of all attributes matching the type (UUID) and value.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x08	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x00	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>start</b>	First requested handle number
7 - 8	<b>uint16</b>	<b>end</b>	Last requested handle number
9 - 10	<b>uint16</b>	<b>uuid</b>	2 octet UUID to find
11	<b>uint8array</b>	<b>value</b>	Attribute value to find

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x00	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>result</b>	0 : the operation was successful Otherwise error occurred

**Table: EVENTS**

Event	Description
attclient_group_found	Attributes found
attclient_procedure_completed	Procedure has completed and new procedure can be started on GATT server

## C Functions

```
/* Function */
void ble_cmd_attclient_find_by_type_value(
    uint8 connection,
    uint16 start,
    uint16 end,
    uint16 uuid,
    uint8 value_len,
    const uint8* value_data
);

/* Callback */
struct ble_msg_attclient_find_by_type_value_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_attclient_find_by_type_value(
    const struct ble_msg_attclient_find_by_type_value_rsp_t * msg
)
```

## BGScript Functions

```
call attclient_find_by_type_value(connection, start, end, uuid, value_len, value_data)(connection,
result)
```

## Find Information

This command is used to discover attribute handles and their types (UUIDs) in a given handle range.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x05	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x03	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>start</b>	First attribute handle
7 - 8	<b>uint16</b>	<b>end</b>	Last attribute handle

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x03	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>result</b>	0 if the command was successful Otherwise error occurred

**Table: EVENTS**

Event	Description
attclient find_information_found	Handle, type - mapping found
attclient procedure_completed	Find information procedure has completed

### C Functions

```
/* Function */
void ble_cmd_attclient_find_information(
    uint8 connection,
    uint16 start,
    uint16 end
);

/* Callback */
struct ble_msg_attclient_find_information_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_attclient_find_information(
    const struct ble_msg_attclient_find_information_rsp_t * msg
)
```

## BGScript Functions

```
call attclient_find_information(connection, start, end)(connection, result)
```

## Indicate Confirm

Send confirmation for received indication. Use only if manual indications are enabled in config.xml

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x07	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection Handle

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x07	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result

### C Functions

```
/* Function */
void ble_cmd_attclient_indicate_confirm(
    uint8 connection
);

/* Callback */
struct ble_msg_attclient_indicate_confirm_rsp_t{
    uint16 result
}
void ble_rsp_attclient_indicate_confirm(
    const struct ble_msg_attclient_indicate_confirm_rsp_t * msg
)
```

### BGScript Functions

```
call attclient_indicate_confirm(connection)(result)
```

## Prepare Write

Send prepare write request to remote host for queuing.

Queued writes are executed or canceled with `attclient_execute_write` command. This command will be acknowledged by the remote device, triggering an "attclient\_procedure\_completed" event. Example flow for using this to write a 30-byte characteristic value, requiring two separate writes:

1. **attclient\_prepare\_write(...., partial data)**
2. wait for `rsp_attclient_prepare_write`
3. wait for `evt_attclient_procedure_completed`
4. **attclient\_prepare\_write(...., partial data)**
5. wait for `rsp_attclient_prepare_write`
6. wait for `evt_attclient_procedure_completed`
7. **attclient\_execute\_write(1)**
8. wait for `rsp_attclient_execute_write`
9. wait for `evt_attclient_procedure_completed`

NOTE: It is not mandatory for server to support this command. It is recommended to use this command to only write long-attributes which do not fit in single att-packet.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x06	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x09	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection Handle
5 - 6	<b>uint16</b>	<b>atthandle</b>	Attribute handle
7 - 8	<b>uint16</b>	<b>offset</b>	Offset to write to
9	<b>uint8array</b>	<b>data</b>	data to write, maximum amount of data that can be sent in single command is 18-bytes

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x09	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection Handle
5 - 6	<b>uint16</b>	<b>result</b>	Command result

**Table: EVENTS**

Event	Description
<code>attclient_procedure_completed</code>	Write operation has been acknowledged by remote end

## C Functions

```
/* Function */
void ble_cmd_attclient_prepare_write(
    uint8 connection,
    uint16 atthandle,
    uint16 offset,
    uint8 data_len,
    const uint8* data_data
);

/* Callback */
struct ble_msg_attclient_prepare_write_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_attclient_prepare_write(
    const struct ble_msg_attclient_prepare_write_rsp_t * msg
)
```

## BGScript Functions

```
call attclient_prepare_write(connection, atthandle, offset, data_len, data_data)(connection,
result)
```

## Read By Group Type

This command reads the value of each attribute of a given type and in a given handle range.

The command is typically used for primary (UUID: 0x2800) and secondary (UUID: 0x2801) service discovery.

Discovered services are reported by [Group Found](#) - event.

When procedure is completed [Procedure Completed](#) - event is generated.

u' 0

u' 0

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x06	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x01	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection Handle
5 - 6	<b>uint16</b>	<b>start</b>	First requested handle number
7 - 8	<b>uint16</b>	<b>end</b>	Last requested handle number
9	<b>uint8array</b>	<b>uuid</b>	group uuid to find

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x01	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection Handle
5 - 6	<b>uint16</b>	<b>result</b>	Command result

**Table: EVENTS**

Event	Description
attclient_group_found	Attributes found
attclient_procedure_completed	Procedure has completed and new procedure can be started on GATT server



## C Functions

```
/* Function */
void ble_cmd_attclient_read_by_group_type(
    uint8 connection,
    uint16 start,
    uint16 end,
    uint8 uuid_len,
    const uint8* uuid_data
);

/* Callback */
struct ble_msg_attclient_read_by_group_type_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_attclient_read_by_group_type(
    const struct ble_msg_attclient_read_by_group_type_rsp_t * msg
)
```

## BGScript Functions

```
call attclient_read_by_group_type(connection, start, end, uuid_len, uuid_data)(connection, result)
```

## Read By Handle

This command reads a remote attribute's value with the given handle. Read by handle can be used to read attributes up to 22 bytes.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x04	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection Handle
5 - 6	<b>uint16</b>	<b>chrhandle</b>	Attribute handle

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x04	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>result</b>	0 : the command was successful Otherwise error occurred

**Table: EVENTS**

Event	Description
attclient attribute_value	Attribute value received
attclient procedure_completed	ATT command failed

### C Functions

```
/* Function */
void ble_cmd_attclient_read_by_handle(
    uint8 connection,
    uint16 chrhandle
);

/* Callback */
struct ble_msg_attclient_read_by_handle_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_attclient_read_by_handle(
    const struct ble_msg_attclient_read_by_handle_rsp_t * msg
)
```

## BGScript Functions

```
call attclient_read_by_handle(connection, chrhandle)(connection, result)
```

## Read By Type

Reads the value of each attribute of a given type (UUID) and in a given attribute handle range.

The command for example used to discover the characteristic declarations (UUID: 0x2803) of a service.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x06	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x02	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>start</b>	First attribute handle
7 - 8	<b>uint16</b>	<b>end</b>	Last attribute handle
9	<b>uint8array</b>	<b>uuid</b>	Attribute type (UUID)

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x02	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection Handle
5 - 6	<b>uint16</b>	<b>result</b>	0 : the command was successful Otherwise an error occurred

**Table: EVENTS**

Event	Description
attclient attribute_value	Attribute value read from GATT server
attclient procedure_completed	Returned if error occurred

## C Functions

```
/* Function */
void ble_cmd_attclient_read_by_type(
    uint8 connection,
    uint16 start,
    uint16 end,
    uint8 uuid_len,
    const uint8* uuid_data
);

/* Callback */
struct ble_msg_attclient_read_by_type_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_attclient_read_by_type(
    const struct ble_msg_attclient_read_by_type_rsp_t * msg
)
```

## BGScript Functions

```
call attclient_read_by_type(connection, start, end, uuid_len, uuid_data)(connection, result)
```

## Read Long

Use this command to read long attribute values.

Starts a procedure where client first sends normal read to the server. and if returned attribute value length is equal to MTU, sends read long read requests until rest of the attribute is read.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x08	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection Handle
5 - 6	<b>uint16</b>	<b>chrhandle</b>	Attribute handle

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x08	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection Handle
5 - 6	<b>uint16</b>	<b>result</b>	<b>0</b> : Command executed successfully <b>Non-zero</b> : An error occurred

**Table: EVENTS**

Event	Description
attclient attribute_value	Data received from remote end
attclient procedure_completed	Full attribute has read, or error occurred

### C Functions

```
/* Function */
void ble_cmd_attclient_read_long(
    uint8 connection,
    uint16 chrhandle
);

/* Callback */
struct ble_msg_attclient_read_long_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_attclient_read_long(
    const struct ble_msg_attclient_read_long_rsp_t * msg
)
```

## BGScript Functions

```
call attclient_read_long(connection, chrhandle)(connection, result)
```

## Read Multiple

Read multiple attributes from server

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x0B	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5	<b>uint8array</b>	<b>handles</b>	List of attribute handles to read from remote end

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x0B	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection Handle
5 - 6	<b>uint16</b>	<b>result</b>	Command result

**Table: EVENTS**

Event	Description
attclient_read_multiple_response	Attribute data if command was succesful
attclient_procedure_completed	Operation has failed

### C Functions

```
/* Function */
void ble_cmd_attclient_read_multiple(
    uint8 connection,
    uint8 handles_len,
    const uint8* handles_data
);

/* Callback */
struct ble_msg_attclient_read_multiple_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_attclient_read_multiple(
    const struct ble_msg_attclient_read_multiple_rsp_t * msg
)
```

### BGScript Functions

```
call attclient_read_multiple(connection, handles_len, handles_data)(connection, result)
```



## Write Command

Writes a remote attribute's value with given handle and value. Write command will NOT be acknowledged by the remote end.

Write command can be used to write attribute values up to 20 bytes.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x04	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x06	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>atthandle</b>	Attribute handle to write
7	<b>uint8array</b>	<b>data</b>	Value for the attribute

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x06	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection Handle
5 - 6	<b>uint16</b>	<b>result</b>	<b>0</b> : Command executed successfully <b>Non-zero</b> : An error occurred

### C Functions

```
/* Function */
void ble_cmd_attclient_write_command(
    uint8 connection,
    uint16 atthandle,
    uint8 data_len,
    const uint8* data_data
);

/* Callback */
struct ble_msg_attclient_write_command_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_attclient_write_command(
    const struct ble_msg_attclient_write_command_rsp_t * msg
)
```

### BGScript Functions

```
call attclient_write_command(connection, atthandle, data_len, data_data)(connection, result)
```

## 5.1.2 Enumerations

Attribute Client commands

### Attribute Value Types

Attribute Value Types

**Table: VALUES**

Value	Name	Description
0	attclient_attribute_value_type_read	Value was read
1	attclient_attribute_value_type_notify	Value was notified
2	attclient_attribute_value_type_indicate	Value was indicated
3	attclient_attribute_value_type_read_by_type	Value was read
4	attclient_attribute_value_type_read_blob	Value was part of long attribute
5	attclient_attribute_value_type_indicate_rsp_req	Value was indicated and remote end is waiting for confirmation, use <a href="#">Indicate Confirm</a> to send confirmation to other end.

## 5.1.3 Events

Attribute Client events

### Attribute Value

This event is produced at the GATT client side when an attribute value is passed from the GATT server to the GATT client, typically after a [Read by Handle](#) command.

This is also received at the GATT client side when an attribute is indicated or notified by the GATT server to the GATT client.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hilen	Message type: event
1	0x05	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x05	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>atthandle</b>	Attribute handle
7	<b>uint8</b>	<b>type</b>	Attribute type
8	<b>uint8array</b>	<b>value</b>	Attribute value (data)

#### C Functions

```
/* Callback */
struct ble_msg_attclient_attribute_value_evt_t{
    uint8 connection,
    uint16 atthandle,
    uint8 type,
    uint8 value_len,
    const uint8* value_data
}
void ble_evt_attclient_attribute_value(
    const struct ble_msg_attclient_attribute_value_evt_t * msg
)
```

#### BGScript Functions

```
event attclient_attribute_value(connection, atthandle, type, value_len, value_data)
```

## Find Information Found

This event is generated when characteristics type mappings are found. Typically after [Find Information](#) command has been issued to discover all attributes of a service.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x04	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x04	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>chrhandle</b>	Characteristics handle
7	<b>uint8array</b>	<b>uuid</b>	Characteristics type (UUID)

### C Functions

```
/* Callback */
struct ble_msg_attclient_find_information_found_evt_t{
    uint8 connection,
    uint16 chrhandle,
    uint8 uuid_len,
    const uint8* uuid_data
}
void ble_evt_attclient_find_information_found(
    const struct ble_msg_attclient_find_information_found_evt_t * msg
)
```

### BGScript Functions

```
event attclient_find_information_found(connection, chrhandle, uuid_len, uuid_data)
```

## Group Found

This event is produced when an attribute group (service) is found. Typically this event is produced after [Read by Group Type](#) command.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x06	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x02	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>start</b>	Starting handle
7 - 8	<b>uint16</b>	<b>end</b>	Ending handle (note "end" is a reserved word and in BG script, "end" cannot be used as such)
9	<b>uint8array</b>	<b>uuid</b>	UUID if the service  Length is 0 if no services are found

### C Functions

```
/* Callback */
struct ble_msg_attclient_group_found_evt_t{
    uint8 connection,
    uint16 start,
    uint16 end,
    uint8 uuid_len,
    const uint8* uuid_data
}
void ble_evt_attclient_group_found(
    const struct ble_msg_attclient_group_found_evt_t * msg
)
```

### BGScript Functions

```
event attclient_group_found(connection, start, end, uuid_len, uuid_data)
```

## Indicated

This event is produced at the GATT server side when an attribute is successfully indicated by the GATT server to the GATT client.

That is, the event is only produced at the GATT server if the indication is acknowledged by the GATT client at the remote side.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x03	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x00	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>attrhandle</b>	Attribute handle

### C Functions

```
/* Callback */
struct ble_msg_attclient_indicated_evt_t{
    uint8 connection,
    uint16 attrhandle
}
void ble_evt_attclient_indicated(
    const struct ble_msg_attclient_indicated_evt_t * msg
)
```

### BGScript Functions

```
event attclient_indicated(connection, attrhandle)
```

## Procedure Completed

This event is produced at the GATT client when an attribute protocol event is completed, and new operation can be issued.

This event is produced for example after the `attclient_attribute_write` is used by the GATT client, to indicate if the GATT server has successfully updated the GATT database.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hilen	Message type: event
1	0x05	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x01	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Object Handle
5 - 6	<b>uint16</b>	<b>result</b>	Result code is 0 if operation was successful or attribute protocol error code returned by remote GATT-server if operation was unsuccessful.
7 - 8	<b>uint16</b>	<b>chrhandle</b>	Characteristic handle at which the event ended

### C Functions

```
/* Callback */
struct ble_msg_attclient_procedure_completed_evt_t{
    uint8 connection,
    uint16 result,
    uint16 chrhandle
}
void ble_evt_attclient_procedure_completed(
    const struct ble_msg_attclient_procedure_completed_evt_t * msg
)
```

### BGScript Functions

```
event attclient_procedure_completed(connection, result, chrhandle)
```

## Read Multiple Response

Response to read multiple request

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x02	lolen	Minimum payload length
2	0x04	class	Message class: Attribute Client
3	0x06	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5	<b>uint8array</b>	<b>handles</b>	List of attribute handles to read from remote end

### C Functions

```
/* Callback */
struct ble_msg_attclient_read_multiple_response_evt_t{
    uint8 connection,
    uint8 handles_len,
    const uint8* handles_data
}
void ble_evt_attclient_read_multiple_response(
    const struct ble_msg_attclient_read_multiple_response_evt_t * msg
)
```

### BGScript Functions

```
event attclient_read_multiple_response(connection, handles_len, handles_data)
```



## 5.2 Attribute Database

The Attribute Database class provides methods to read and write attributes to the devices local attribute database. This class is usually only needed on sensor devices (Attribute server) to update attribute values.

### 5.2.1 Commands

Attribute database commands

#### Read

The command reads the given attribute's value from the local database. There is a 32-byte limit in the amount of data that can be read at a time, so multiple instances of this command, using accordingly increasing offset, must be launched to completely read attributes which are more than 32 bytes in size..

Table: COMMAND

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x04	lolen	Minimum payload length
2	0x02	class	Message class: Attribute Database
3	0x01	method	Message ID
4 - 5	<b>uint16</b>	<b>handle</b>	Handle of the attribute to read
6 - 7	<b>uint16</b>	<b>offset</b>	Offset to read from. 32 bytes can be read at max.

Table: RESPONSE

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x07	lolen	Minimum payload length
2	0x02	class	Message class: Attribute Database
3	0x01	method	Message ID
4 - 5	<b>uint16</b>	<b>handle</b>	Handle of the attribute which was read
6 - 7	<b>uint16</b>	<b>offset</b>	Offset read from
8 - 9	<b>uint16</b>	<b>result</b>	<b>0</b> : the read was successful <b>Non-zero</b> : An error occurred
10	<b>uint8array</b>	<b>value</b>	Value of the attribute

## C Functions

```
/* Function */
void ble_cmd_attributes_read(
    uint16 handle,
    uint16 offset
);

/* Callback */
struct ble_msg_attributes_read_rsp_t{
    uint16 handle,
    uint16 offset,
    uint16 result,
    uint8 value_len,
    const uint8* value_data
}
void ble_rsp_attributes_read(
    const struct ble_msg_attributes_read_rsp_t * msg
)
```

## BGScript Functions

```
call attributes_read(handle, offset)(handle, offset, result, value_len, value_data)
```

## Read Type

This command reads the given attribute's type (UUID) from the local database.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x02	class	Message class: Attribute Database
3	0x02	method	Message ID
4 - 5	<b>uint16</b>	<b>handle</b>	Handle of the attribute to read

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x05	lolen	Minimum payload length
2	0x02	class	Message class: Attribute Database
3	0x02	method	Message ID
4 - 5	<b>uint16</b>	<b>handle</b>	Handle of the attribute which was read
6 - 7	<b>uint16</b>	<b>result</b>	<b>0:</b> if the read was successful <b>Non-zero:</b> An error occurred
8	<b>uint8array</b>	<b>value</b>	Value of the attribute type (UUID)

### C Functions

```
/* Function */
void ble_cmd_attributes_read_type(
    uint16 handle
);

/* Callback */
struct ble_msg_attributes_read_type_rsp_t{
    uint16 handle,
    uint16 result,
    uint8 value_len,
    const uint8* value_data
}
void ble_rsp_attributes_read_type(
    const struct ble_msg_attributes_read_type_rsp_t * msg
)
```

### BGScript Functions

```
call attributes_read_type(handle)(handle, result, value_len, value_data)
```

## User Read Response

This command normally follows the event `attributes_user_read_request`. It includes the attribute data that have to be passed directly to the remote GATT client that just asked to read such attribute.

The response to user attribute read request must happen within 30s or the other end will timeout.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x02	class	Message class: Attribute Database
3	0x03	method	Message ID
4	uint8	connection	Connection handle to respond to
5	uint8	att_error	Attribute errorcode to send if error, set to 0 to send datafield
6	uint8array	value	Data to send

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x02	class	Message class: Attribute Database
3	0x03	method	Message ID

### C Functions

```
/* Function */
void ble_cmd_attributes_user_read_response(
    uint8 connection,
    uint8 att_error,
    uint8 value_len,
    const uint8* value_data
);

/* Callback */
void ble_rsp_attributes_user_read_response(
    const void *nul
)
```

### BGScript Functions

```
call attributes_user_read_response(connection, att_error, value_len, value_data)
```

## User Write Response

This command is used by the GATT Server to acknowledge the GATT Client that the desired attribute was written. It follows the `attributes_value` event carrying "attributes\_attribute\_change\_reason\_write\_request\_user" as reason. This must be sent within 30 seconds from the time the GATT Client issued the write command.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x02	class	Message class: Attribute Database
3	0x04	method	Message ID
4	uint8	connection	Connection handle to respond to
5	uint8	att_error	Attribute error code to send if an error occurs.  <b>0x0</b> : Write was accepted  <b>0x80-0x9F</b> : Reserved for user defined error codes

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x02	class	Message class: Attribute Database
3	0x04	method	Message ID

### C Functions

```
/* Function */
void ble_cmd_attributes_user_write_response(
    uint8 connection,
    uint8 att_error
);

/* Callback *
void ble_rsp_attributes_user_write_response(
    const void *nul
)
```

### BGScript Functions

```
call attributes_user_write_response(connection, att_error)
```

## Write

This command writes an attribute's value to the local database.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x04	lolen	Minimum payload length
2	0x02	class	Message class: Attribute Database
3	0x00	method	Message ID
4 - 5	<b>uint16</b>	<b>handle</b>	Handle of the attribute to write
6	<b>uint8</b>	<b>offset</b>	Attribute offset to write data
7	<b>uint8array</b>	<b>value</b>	Value of the attribute to write

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x02	lolen	Minimum payload length
2	0x02	class	Message class: Attribute Database
3	0x00	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	<b>0</b> : the write was successful <b>Non-zero</b> : An error occurred

### C Functions

```
/* Function */
void ble_cmd_attributes_write(
    uint16 handle,
    uint8 offset,
    uint8 value_len,
    const uint8* value_data
);

/* Callback */
struct ble_msg_attributes_write_rsp_t{
    uint16 result
}
void ble_rsp_attributes_write(
    const struct ble_msg_attributes_write_rsp_t * msg
)
```

### BGScript Functions

```
call attributes_write(handle, offset, value_len, value_data)(result)
```

## 5.2.2 Enumerations

Attribute Database enumerations

### Attribute Change Reason

Reason for attribute change

**Table: VALUES**

Value	Name	Description
0	attributes_attribute_change_reason_write_request	Value was written by remote end using write request
1	attributes_attribute_change_reason_write_command	Value was written by remote end using write command
2	attributes_attribute_change_reason_write_request_user	Value was written by remote end, stack is waiting for write response to be sent to other end. Use <a href="#">User Write Response</a> to send response.

## Attribute Status Flags

Attribute status flags

**Table: VALUES**

Value	Name	Description
1	attributes_attribute_status_flag_notify	Notifications are enabled
2	attributes_attribute_status_flag_indicate	Indications are enabled



## 5.2.3 Events

Attribute Database events

### Status

This event indicates the attribute status flags have changed

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hilen	Message type: event
1	0x03	lolen	Minimum payload length
2	0x02	class	Message class: Attribute Database
3	0x02	method	Message ID
4 - 5	<b>uint16</b>	<b>handle</b>	Attribute handle
6	<b>uint8</b>	<b>flags</b>	Attribute status flags  See: <a href="#">Attribute Status Flags</a>

#### C Functions

```
/* Callback */
struct ble_msg_attributes_status_evt_t{
    uint16 handle,
    uint8 flags
}
void ble_evt_attributes_status(
    const struct ble_msg_attributes_status_evt_t * msg
)
```

#### BGScript Functions

```
event attributes_status(handle, flags)
```

## User Read Request

User-backed attribute data is requested. In other words, this event is sent when remote GATT client is requesting to read an attribute set as "user" in the gatt.xml.

Respond to this event using `attributes_user_read_response`.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x06	lolen	Minimum payload length
2	0x02	class	Message class: Attribute Database
3	0x01	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection ID which requested attribute
5 - 6	<b>uint16</b>	<b>handle</b>	Attribute handle requested
7 - 8	<b>uint16</b>	<b>offset</b>	Attribute offset to send data from
9	<b>uint8</b>	<b>maxsize</b>	Maximum data size to respond with, if more data is sent extra bytes are ignored

### C Functions

```
/* Callback */
struct ble_msg_attributes_user_read_request_evt_t{
    uint8 connection,
    uint16 handle,
    uint16 offset,
    uint8 maxsize
}
void ble_evt_attributes_user_read_request(
    const struct ble_msg_attributes_user_read_request_evt_t * msg
)
```

### BGScript Functions

```
event attributes_user_read_request(connection, handle, offset, maxsize)
```

## Value

This event is produced at the GATT server side when a local attribute value is being written by a remote GATT client.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hilen	Message type: event
1	0x07	lolen	Minimum payload length
2	0x02	class	Message class: Attribute Database
3	0x00	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5	<b>uint8</b>	<b>reason</b>	Reason why value has changed see: enum <a href="#">Attribute Change Reason</a>
6 - 7	<b>uint16</b>	<b>handle</b>	Attribute handle, which was changed
8 - 9	<b>uint16</b>	<b>offset</b>	Offset into attribute value where data starts
10	<b>uint8array</b>	<b>value</b>	Attribute value

### C Functions

```
/* Callback */
struct ble_msg_attributes_value_evt_t{
    uint8 connection,
    uint8 reason,
    uint16 handle,
    uint16 offset,
    uint8 value_len,
    const uint8* value_data
}
void ble_evt_attributes_value(
    const struct ble_msg_attributes_value_evt_t * msg
)
```

### BGScript Functions

```
event attributes_value(connection, reason, handle, offset, value_len, value_data)
```

## 5.3 Connection

The Connection class provides methods to manage *Bluetooth* low energy connections and their statuses.

### 5.3.1 Commands

Connection class commands

#### Disconnect

This command disconnects an active connection. The command sends a request to link layer to start disconnection procedure.

When link is disconnected `Disconnected` - event is produced.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x00	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x03	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x00	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>result</b>	<b>0</b> : disconnection procedure successfully started <b>Non-zero</b> : An error occurred

**Table: EVENTS**

Event	Description
connection disconnected	Sent after connection has disconnected

## C Functions

```
/* Function */
void ble_cmd_connection_disconnect(
    uint8 connection
);

/* Callback */
struct ble_msg_connection_disconnect_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_connection_disconnect(
    const struct ble_msg_connection_disconnect_rsp_t * msg
)
```

## BGScript Functions

```
call connection_disconnect(connection)(connection, result)
```

## Get Rssi

This commands returns the Receiver Signal Strength Indication (RSSI) of an active connection.



At -38 dBm the BLE112 receiver is saturated. The measurement value may depend on the used hardware and design.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x01	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x02	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x01	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5	<b>int8</b>	<b>rssi</b>	RSSI value of the connection in dBm. <b>Range:</b> -103 to -38

### C Functions

```
/* Function */
void ble_cmd_connection_get_rssi(
    uint8 connection
);

/* Callback */
struct ble_msg_connection_get_rssi_rsp_t{
    uint8 connection,
    int8 rssi
}
void ble_rsp_connection_get_rssi(
    const struct ble_msg_connection_get_rssi_rsp_t * msg
)
```

### BGScript Functions

```
call connection_get_rssi(connection)(connection, rssi)
```

## Get Status

This command returns the status of the given connection.

Status is returned in [Status](#) event.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x07	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x01	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x07	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle

**Table: EVENTS**

Event	Description
connection status	Reports the status of a connection

### C Functions

```
/* Function */
void ble_cmd_connection_get_status(
    uint8 connection
);

/* Callback */
struct ble_msg_connection_get_status_rsp_t{
    uint8 connection
}
void ble_rsp_connection_get_status(
    const struct ble_msg_connection_get_status_rsp_t * msg
)
```

### BGScript Functions

```
call connection_get_status(connection)(connection)
```

## Update

This command updates the connection parameters of a given connection. The parameters have the same meaning and follow the same rules as for the command `gap_connect_direct`

If sent from a master, sends parameter update request to the link layer.

If sent from a slave, sends L2CAP connection parameter update request to the master.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x09	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x02	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>interval_min</b>	Minimum connection interval (units of 1.25ms)
7 - 8	<b>uint16</b>	<b>interval_max</b>	Maximum connection interval (units of 1.25ms)
9 - 10	<b>uint16</b>	<b>latency</b>	Slave latency (defines how many connections intervals a slave may skip)
11 - 12	<b>uint16</b>	<b>timeout</b>	Supervision timeout (units of 10ms)

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hilen	Message type: response
1	0x03	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x02	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>result</b>	<b>0</b> : the update was successful <b>Non-zero</b> : An error occurred.

### C Functions

```
/* Function */
void ble_cmd_connection_update(
    uint8 connection,
    uint16 interval_min,
    uint16 interval_max,
    uint16 latency,
    uint16 timeout
);

/* Callback */
struct ble_msg_connection_update_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_connection_update(
    const struct ble_msg_connection_update_rsp_t * msg
)
```



## BGScript Functions

```
call connection_update(connection, interval_min, interval_max, latency, timeout)(connection, result)
```

## Version Update

This command requests a version exchange of a given connection.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x03	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x03	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x03	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>result</b>	<b>0</b> : the request was successful <b>Non-zero</b> : An error occurred

**Table: EVENTS**

Event	Description
connection_version_ind	Sent after receiving version indication from other end

### C Functions

```
/* Function */
void ble_cmd_connection_version_update(
    uint8 connection
);

/* Callback */
struct ble_msg_connection_version_update_rsp_t{
    uint8 connection,
    uint16 result
}
void ble_rsp_connection_version_update(
    const struct ble_msg_connection_version_update_rsp_t * msg
)
```

### BGScript Functions

```
call connection_version_update(connection)(connection, result)
```

## 5.3.2 Enumerations

Connection class enumerations

### Connection Status Flags

The possible connection status flags are described in the table below. The flags field is a bit mask, so multiple flags can be set at a time. If the bit is 1 the flag is active and if the bit is 0 the flag is inactive.

**Table: VALUES**

Value	Name	Description
bit 0	connection_connected	This status flag tells the connection exists to a remote device.
bit 1	connection_encrypted	This flag tells the connection is encrypted.
bit 2	connection_completed	Connection completed flag, which is used to tell a new connection has been created.
bit 3	connection_parameters_change	This flag tells that connection parameters have changed and. It is set when connection parameters have changed due to a link layer operation.

### 5.3.3 Events

Connection class events

#### Disconnected

This event is produced when a connection is disconnected.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x03	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x04	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5 - 6	<b>uint16</b>	<b>reason</b>	Disconnection reason code <b>0</b> : disconnected by local user

#### C Functions

```
/* Callback */
struct ble_msg_connection_disconnected_evt_t{
    uint8 connection,
    uint16 reason
}
void ble_evt_connection_disconnected(
    const struct ble_msg_connection_disconnected_evt_t * msg
)
```

#### BGScript Functions

```
event connection_disconnected(connection, reason)
```

## Feature Ind

This event indicates the remote devices features.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x02	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x02	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5	<b>uint8array</b>	<b>features</b>	CtrlData field from LL_FEATURE_RSP - packet

### C Functions

```
/* Callback */
struct ble_msg_connection_feature_ind_evt_t{
    uint8 connection,
    uint8 features_len,
    const uint8* features_data
}
void ble_evt_connection_feature_ind(
    const struct ble_msg_connection_feature_ind_evt_t * msg
)
```

### BGScript Functions

```
event connection_feature_ind(connection, features_len, features_data)
```

## Status

This event indicates the connection status and parameters.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hilen	Message type: event
1	0x10	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x00	method	Message ID
4	<b>uint8</b>	<b>connection</b>	Connection handle
5	<b>uint8</b>	<b>flags</b>	Connection status flags use <a href="#">connstatus-enumerator</a>
6 - 11	<b>bd_addr</b>	<b>address</b>	Remote devices Bluetooth address
12	<b>uint8</b>	<b>address_type</b>	Remote address type see: <a href="#">Bluetooth Address Types--gap</a>
13 - 14	<b>uint16</b>	<b>conn_interval</b>	Current connection interval (units of 1.25ms)
15 - 16	<b>uint16</b>	<b>timeout</b>	Current supervision timeout (units of 10ms)
17 - 18	<b>uint16</b>	<b>latency</b>	Slave latency (how many connection intervals the slave may skip)
19	<b>uint8</b>	<b>bonding</b>	bonding handle if there is stored bonding for this device 0xff otherwise

### C Functions

```
/* Callback */
struct ble_msg_connection_status_evt_t{
    uint8 connection,
    uint8 flags,
    bd_addr address,
    uint8 address_type,
    uint16 conn_interval,
    uint16 timeout,
    uint16 latency,
    uint8 bonding
}
void ble_evt_connection_status(
    const struct ble_msg_connection_status_evt_t * msg
)
```

### BGScript Functions

```
event connection_status(connection, flags, address, address_type, conn_interval, timeout, latency,
bonding)
```

## Version Ind

This event indicates the remote devices version.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x06	lolen	Minimum payload length
2	0x03	class	Message class: Connection
3	0x01	method	Message ID
4	uint8	connection	Connection handle
5	uint8	vers_nr	<i>Bluetooth</i> controller specification version
6 - 7	uint16	comp_id	Manufacturer of <i>Bluetooth</i> controller
8 - 9	uint16	sub_vers_nr	<i>Bluetooth</i> controller version

### C Functions

```
/* Callback */
struct ble_msg_connection_version_ind_evt_t{
    uint8 connection,
    uint8 vers_nr,
    uint16 comp_id,
    uint16 sub_vers_nr
}
void ble_evt_connection_version_ind(
    const struct ble_msg_connection_version_ind_evt_t * msg
)
```

### BGScript Functions

```
event connection_version_ind(connection, vers_nr, comp_id, sub_vers_nr)
```

## 5.4 Generic Access Profile

The Generic Access Profile (GAP) class provides methods to control the GAP level functionality such as: device discovery, connection establishment and local devices connection and discovery modes. The GAP class also allows the control of local devices privacy mode.

### 5.4.1 Commands

Generic Access Profile class commands

#### Connect Direct

This command will start the GAP direct connection establishment procedure to a dedicated *Bluetooth* low energy device.

The module/dongle will enter *Initiating State* in order to continuously scan for the connectable advertisement packet from the remote device which matches the given address. Upon receiving the intended advertisement packet, the module will send the CONNECT\_REQ to the device to connect to, and it will report to have entered the *Connection State* via the [connection status](#) event.

Procedure is cancelled with [End Procedure](#) command.

When in *Initiating State* there are no [scan response](#) events. After *Connection State* is entered this command should be launched again if there is the need to automatically connect to another known device which might be in range and advertising.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x0F	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x03	method	Message ID
4 - 9	<b>bd_addr</b>	<b>address</b>	<a href="#">Bluetooth address</a> of the target device
10	<b>uint8</b>	<b>addr_type</b>	see: <a href="#">Bluetooth Address Types</a>
11 - 12	<b>uint16</b>	<b>conn_interval_min</b>	Minimum connection interval (in units of 1.25ms). The lowest possible connection interval is 7.50ms In case of multiple connections, the master should use a connection interval divisible by the number of max allowed connections times 2.5ms, in accordance to the instructions in the Profile Toolkit Developer Guide (see config.xml).
13 - 14	<b>uint16</b>	<b>conn_interval_max</b>	Maximum connection interval (in units of 1.25ms). The maximum possible connection interval is 4s  Must be equal or bigger than <code>conn_interval_min</code>
15 - 16	<b>uint16</b>	<b>timeout</b>	Supervision timeout (in units of 10ms). Minimum value: 100ms, maximum value: 32s, must be equal or bigger than <code>conn_interval_max</code>



Byte	Type	Name	Description
17 - 18	uint16	latency	<p>This parameter configures the slave latency. Slave latency defines how many connection intervals a slave can skip. Increasing slave latency will decrease the energy consumption of the slave in scenarios where slave does not have data to send at every connection interval.</p> <p>Range: <b>0 - 500</b>  <b>0</b> : Slave latency is disabled.</p> <p><b>Example:</b>            Connection interval is 10ms and slave latency is 9: this means that the slave is allowed to communicate every 100ms, but it can communicate every 10ms if needed.</p> <p><b>Note:</b>  <i>Slave Latency</i> x <i>Connection interval</i> can NOT be higher than supervision timeout.</p>

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x03	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x03	method	Message ID
4 - 5	uint16	result	<p><b>0</b> : procedure was successfully started</p> <p><b>Non-zero</b>: An error occurred</p>
6	uint8	connection_handle	Connection handle that is reserved for new connection

**Table: EVENTS**

Event	Description
connection status	Sent after connection is established

### C Functions

```

/* Function */
void ble_cmd_gap_connect_direct(
    bd_addr address,
    uint8 addr_type,
    uint16 conn_interval_min,
    uint16 conn_interval_max,
    uint16 timeout,
    uint16 latency
);

/* Callback */
struct ble_msg_gap_connect_direct_rsp_t{
    uint16 result,
    uint8 connection_handle
}
void ble_rsp_gap_connect_direct(
    const struct ble_msg_gap_connect_direct_rsp_t * msg
)

```

## BGScript Functions

```
call gap_connect_direct(address, addr_type, conn_interval_min, conn_interval_max, timeout,  
latency)(result, connection_handle)
```

## Connect Selective

This command will start the GAP direct connection establishment procedure to a set of dedicated Bluetooth low energy devices.

The module/dongle will enter *Initiating State* in order to continuously scan for the connectable advertisement packets from the remote devices which are registered in the local running [Whitelist](#). Upon receiving an advertisement packet from one of the registered devices, the module will send the CONNECT\_REQ to this device, and it will report to have entered the *Connection State* via the [connection status](#) event.

Procedure is cancelled with [End Procedure](#) command.

When in *Initiating State* there are no [scan response](#) events. After *Connection State* is entered this command should be launched again if there is the need to automatically connect to another of the registered devices which might be in range and advertising.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x08	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x05	method	Message ID
4 - 5	uint16	conn_interval_min	Minimum connection interval
6 - 7	uint16	conn_interval_max	Maximum connection interval
8 - 9	uint16	timeout	Supervision timeout
10 - 11	uint16	latency	Slave latency

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x05	method	Message ID
4 - 5	uint16	result	<b>0</b> : Command was executed successfully <b>Non-zero</b> : An error occurred
6	uint8	connection_handle	Connection handle reserved for connection

**Table: EVENTS**

Event	Description
connection status	Sent after connected to any whitelisted device

## C Functions

```
/* Function */
void ble_cmd_gap_connect_selective(
    uint16 conn_interval_min,
    uint16 conn_interval_max,
    uint16 timeout,
    uint16 latency
);

/* Callback */
struct ble_msg_gap_connect_selective_rsp_t{
    uint16 result,
    uint8 connection_handle
}
void ble_rsp_gap_connect_selective(
    const struct ble_msg_gap_connect_selective_rsp_t * msg
)
```

## BGScript Functions

```
call gap_connect_selective(conn_interval_min, conn_interval_max, timeout, latency)(result,
connection_handle)
```

## Discover

This command starts the GAP discovery procedure to scan for advertising devices.

Scanning parameters can be configured with the `set_scan_parameters` command.

To cancel successfully started procedure use `End Procedure -` command

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x02	method	Message ID
4	<b>uint8</b>	<b>mode</b>	see: <a href="#">GAP Discover Mode</a>

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x02	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x02	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	<b>0</b> : Scan procedure was successfully started <b>Non-zero</b> : An error occurred

**Table: EVENTS**

Event	Description
gap_scan_response	Discovered device scan response

### C Functions

```
/* Function */
void ble_cmd_gap_discover(
    uint8 mode
);

/* Callback */
struct ble_msg_gap_discover_rsp_t{
    uint16 result
}
void ble_rsp_gap_discover(
    const struct ble_msg_gap_discover_rsp_t * msg
)
```

### BGScript Functions

```
call gap_discover(mode)(result)
```

## End Procedure

This command ends the current GAP discovery procedure to stop scanning for advertising devices.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x04	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x02	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x04	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	<b>0:</b> the command was successful <b>Non-zero:</b> An error occurred

### C Functions

```
/* Function */
void ble_cmd_gap_end_procedure(
    void
);

/* Callback */
struct ble_msg_gap_end_procedure_rsp_t{
    uint16 result
}
void ble_rsp_gap_end_procedure(
    const struct ble_msg_gap_end_procedure_rsp_t * msg
)
```

### BGScript Functions

```
call gap_end_procedure()(result)
```

## Set Adv Data

Set advertisement or scan response data. The custom data is only used when the discoverable mode is set to `gap_user_data`.

Notice that data must be formatted in accordance to the Core Specification. See BLUETOOTH SPECIFICATION Version 4.0 [Vol 3 - Part C - Chapter 11].

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x09	method	Message ID
4	uint8	set_scanrsp	Advertisement data type <b>0 : sets advertisement data</b> <b>1 : sets scan response data</b>
5	uint8array	adv_data	Advertisement data to send

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x09	method	Message ID
4 - 5	uint16	result	Command result

### C Functions

```
/* Function */
void ble_cmd_gap_set_adv_data(
    uint8 set_scanrsp,
    uint8 adv_data_len,
    const uint8* adv_data_data
);

/* Callback */
struct ble_msg_gap_set_adv_data_rsp_t{
    uint16 result
}
void ble_rsp_gap_set_adv_data(
    const struct ble_msg_gap_set_adv_data_rsp_t * msg
)
```

### BGScript Functions

```
call gap_set_adv_data(set_scanrsp, adv_data_len, adv_data_data)(result)
```


## Set Adv Parameters

This command sets the advertising parameters.

Device sends advertisement packet on each selected channel at each advertisement interval.

**adv\_interval\_min** and **adv\_interval\_max** define recommended advertisement interval values for link-layer.

Example: If the min is 40ms and the max is 100ms then the real advertisement interval will be mostly the middle value (70ms) and randomly the middle value plus 20ms (90ms). This is according to the specification which defines that there must be an addition of 20ms to the middle value. The minimum value will never be used.

 If you are currently advertising, then any changes set using this command will not take effect until you stop and re-start advertising again.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x05	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x08	method	Message ID
4 - 5	uint16	<b>adv_interval_min</b>	Minimum advertisement interval in units of 625us  <b>Range:</b> 0x20 to 0x4000 (Default 0x200 = 320ms)  <b>Explanation:</b> 0x200 = 512 512 * 625us = 320000us = 320ms
6 - 7	uint16	<b>adv_interval_max</b>	Maximum advertisement interval in units of 625us.  <b>Range:</b> 0x20 to 0x4000 (Default 0x200 = 320ms)
8	uint8	<b>adv_channels</b>	A bit mask to identify which of the three advertisement channels are used.  <b>Examples:</b> <b>0x07:</b> All three channels are used <b>0x03:</b> Advertisement channels 37 and 38 are used. <b>0x04:</b> Only advertisement channel 39 is used

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile



Byte	Type	Name	Description
3	0x08	method	Message ID
4 - 5	uint16	result	<b>0:</b> Command was successfully executed <b>Non-zero:</b> An error occurred

### C Functions

```

/* Function */
void ble_cmd_gap_set_adv_parameters(
    uint16 adv_interval_min,
    uint16 adv_interval_max,
    uint8 adv_channels
);

/* Callback */
struct ble_msg_gap_set_adv_parameters_rsp_t{
    uint16 result
}
void ble_rsp_gap_set_adv_parameters(
    const struct ble_msg_gap_set_adv_parameters_rsp_t * msg
)

```

### BGScript Functions

```

call gap_set_adv_parameters(adv_interval_min, adv_interval_max, adv_channels)(result)

```

## Set Directed Connectable Mode

This command sets device to Directed Connectable mode.

In this mode the device uses fast advertisement procedure for 1.28 seconds, after which the device enters non-connectable mode. If device has a valid re-connection characteristic value, it will be used for connection. Otherwise the address and address type passed as parameters are used.

Re-connection characteristic is a conditional characteristic, which may be included in the GAP service.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x07	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x0A	method	Message ID
4 - 9	<b>bd_addr</b>	<b>address</b>	Address to connect to
10	<b>uint8</b>	<b>addr_type</b>	Address type to connect see:enum gap_address_type

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x0A	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result

**Table: EVENTS**

Event	Description
connection status	Sent after connection is established

### C Functions

```
/* Function */
void ble_cmd_gap_set_directed_connectable_mode(
    bd_addr address,
    uint8 addr_type
);

/* Callback */
struct ble_msg_gap_set_directed_connectable_mode_rsp_t{
    uint16 result
}
void ble_rsp_gap_set_directed_connectable_mode(
    const struct ble_msg_gap_set_directed_connectable_mode_rsp_t * msg
)
```

## BGScript Functions

```
call gap_set_directed_connectable_mode(address, addr_type)(result)
```

## Set Filtering

Set scan, connection, and advertising filtering parameters, based on the whitelist. See also [Whitelist Append](#).

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x06	method	Message ID
4	uint8	scan_policy	see: <a href="#">enum gap_scan_policy</a>
5	uint8	adv_policy	see: <a href="#">enum gap_advertising_policy</a>
6	uint8	scan_duplicate_filtering	<b>0:</b> Do not filter duplicate advertisers <b>1:</b> Filter duplicates

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x06	method	Message ID
4 - 5	uint16	result	<b>0:</b> The command was successfully executed <b>Non-zero:</b> An error occurred

### C Functions

```
/* Function */
void ble_cmd_gap_set_filtering(
    uint8 scan_policy,
    uint8 adv_policy,
    uint8 scan_duplicate_filtering
);

/* Callback */
struct ble_msg_gap_set_filtering_rsp_t{
    uint16 result
}
void ble_rsp_gap_set_filtering(
    const struct ble_msg_gap_set_filtering_rsp_t * msg
)
```

### BGScript Functions

```
call gap_set_filtering(scan_policy, adv_policy, scan_duplicate_filtering)(result)
```

## Set Mode

This command configures the current GAP discoverability and connectability mode. It is used to turn the module into a Slave by starting advertisement in connectable mode. It is also used to stop advertising.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x01	method	Message ID
4	uint8	discover	see:GAP Discoverable Mode
5	uint8	connect	see:GAP Connectable Mode

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x02	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x01	method	Message ID
4 - 5	uint16	result	<b>0</b> : the command was executed successfully <b>Non-zero</b> : An error occurred

**Table: EVENTS**

Event	Description
connection status	Sent if device was connectable and master connected to device

### C Functions

```
/* Function */
void ble_cmd_gap_set_mode(
    uint8 discover,
    uint8 connect
);

/* Callback */
struct ble_msg_gap_set_mode_rsp_t{
    uint16 result
}
void ble_rsp_gap_set_mode(
    const struct ble_msg_gap_set_mode_rsp_t * msg
)
```

### BGScript Functions

```
call gap_set_mode(discover, connect)(result)
```

## Set Privacy Flags

This command sets GAP central/peripheral privacy flags.

By setting for example `peripheral_privacy` to 1, the stack will automatically generate a resolvable random private address for the advertising packets each time the `gap_set_mode` command is used to enter advertising mode.

NOTE: it is not recommended to adjust peripheral privacy because not all implementations can decode resolvable private addresses.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x00	method	Message ID
4	uint8	<b>peripheral_privacy</b>	1: enable peripheral privacy 0: disable peripheral privacy Any other value will have no effect on flag
5	uint8	<b>central_privacy</b>	1: enable central privacy 0: disable central privacy Any other value will have no effect on flag

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x00	method	Message ID

### C Functions

```
/* Function */
void ble_cmd_gap_set_privacy_flags(
    uint8 peripheral_privacy,
    uint8 central_privacy
);

/* Callback */
void ble_rsp_gap_set_privacy_flags(
    const void *nul
)
```

### BGScript Functions

```
call gap_set_privacy_flags(peripheral_privacy, central_privacy)
```

## Set Scan Parameters

Set scan parameters.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x05	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x07	method	Message ID
4 - 5	uint16	scan_interval	At what interval scanner is re-started, in units of 625us  Range: 0x4-0x4000 Default: 0x4B=75 (or 75*0.625ms=46,875ms)  After every scan interval, that is, always when scanner is re-started, a new channel is used. According to the specification, all three channels must be used.
6 - 7	uint16	scan_window	How long to scan over the current channel after every scan interval, that is, after scanner is re-started, in units of 625us  Must be equal or smaller than scan_interval Range: 0x4-0x4000 Default: 0x32=50 (or 50*0.625ms=31,250ms)  If equal to the scan interval, then the module will be constantly scanning and the channel will be changed after every interval.
8	uint8	active	1 - use active scanning, 0 - use passive scanning

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x07	method	Message ID
4 - 5	uint16	result	<b>0:</b> The command was executed successfully  <b>Non-zero:</b> An error occurred

## C Functions

```
/* Function */
void ble_cmd_gap_set_scan_parameters(
    uint16 scan_interval,
    uint16 scan_window,
    uint8 active
);

/* Callback */
struct ble_msg_gap_set_scan_parameters_rsp_t{
    uint16 result
}
void ble_rsp_gap_set_scan_parameters(
    const struct ble_msg_gap_set_scan_parameters_rsp_t * msg
)
```

## BGScript Functions

```
call gap_set_scan_parameters(scan_interval, scan_window, active)(result)
```



## 5.4.2 Enumerations

Generic Access Profile class enumerations

### AD\_FLAGS

Scan header flags

**Table: VALUES**

Value	Name	Description
0x01	GAP_AD_FLAG_LIMITED_DISCOVERABLE	Limited discoverability
0x02	GAP_AD_FLAG_GENERAL_DISCOVERABLE	General discoverability
0x04	GAP_AD_FLAG_BREDR_NOT_SUPPORTED	BR/EDR not supported
0x10	GAP_AD_FLAG_SIMULTANEOUS_LEBREDR_CTRL	BR/EDR controller
0x20	GAP_AD_FLAG_SIMULTANEOUS_LEBREDR_HOST	BE/EDR host
0x1f	GAP_AD_FLAG_MASK	-

## AD Type Flags

Table: VALUES

Value	Name	Description
0	gap_ad_type_none	
1	gap_ad_type_flags	
2	gap_ad_type_services_16bit_more	
3	gap_ad_type_services_16bit_all	
4	gap_ad_type_services_32bit_more	
5	gap_ad_type_services_32bit_all	
6	gap_ad_type_services_128bit_more	
7	gap_ad_type_services_128bit_all	
8	gap_ad_type_localname_short	
9	gap_ad_type_localname_complete	
10	gap_ad_type_txpower	

## Advertising policy

Advertising policy

**Table: VALUES**

Value	Name	Description
0	gap_adv_policy_all	Respond to scan requests from any master, allow connection from any master (default)
1	gap_adv_policy_whitelist_scan	Respond to scan requests from whitelist only, allow connection from any
2	gap_adv_policy_whitelist_connect	Respond to scan requests from any, allow connection from whitelist only
3	gap_adv_policy_whitelist_all	Respond to scan requests from whitelist only, allow connection from whitelist only

## Bluetooth Address Types

Bluetooth address type

**Table: VALUES**

Value	Name	Description
0	gap_address_type_public	Public Address
1	gap_address_type_random	Random Address

## GAP Connectable Mode

GAP connectable mode

**Table: VALUES**

Value	Name	Description
0	gap_non_connectable	Not connectable
1	gap_directed_connectable	Direct Connectable
2	gap_undirected_connectable	Undirected connectable
3	gap_scannable_non_connectable	Same as undirected connectable, but uses ADV_SCAN_IND packets.  Device only accepts scan requests, but is not connectable.

## GAP Discoverable Mode

Gap discoverable mode

Table: VALUES

Value	Name	Description
0	gap_non_discoverable	Non-discoverable mode: the <i>LE Limited Discoverable Mode</i> and the <i>LE General Discoverable Mode</i> bits are NOT set in the <i>Flags AD</i> type. A Master can still connect to the advertising Slave.
1	gap_limited_discoverable	Discoverable using limited scanning mode: the advertisement packets will carry the <i>LE Limited Discoverable Mode</i> bit set in the <i>Flags AD</i> type.
2	gap_general_discoverable	Discoverable using general scanning mode: the advertisement packets will carry the <i>LE General Discoverable Mode</i> bit set in the <i>Flags AD</i> type.
3	gap_broadcast	Same as gap_non_discoverable above.
4	gap_user_data	Send advertisement data defined by user. User is responsible to build the advertising packet so to also contain the appropriate desired <i>Flags AD</i> type.
0x80	gap_enhanced_broadcasting	When turning the most highest bit on, the scanning devices are reported back to the application through <a href="#">Scan Response</a> event.

## GAP Discover Mode

GAP Discoverable modes

Table: VALUES

Value	Name	Description
0	gap_discover_limited	Discover only limited discoverable devices, that is, Slaves which have the <i>LE Limited Discoverable Mode</i> bit set in the <i>Flags</i> AD type of their advertisement packets.
1	gap_discover_generic	Discover limited and generic discoverable devices, that is, Slaves which have the <i>LE Limited Discoverable Mode</i> or the <i>LE General Discoverable Mode</i> bit set in the <i>Flags</i> AD type of their advertisement packets.
2	gap_discover_observation	Discover all devices regardless of the <i>Flags</i> AD type, so also devices in non-discoverable mode will be reported to host.

## SCAN\_HEADER\_FLAGS

Scan header flags

**Table: VALUES**

Value	Name	Description
0	GAP_SCAN_HEADER_ADV_IND	Connectable undirected advertising event
1	GAP_SCAN_HEADER_ADV_DIRECT_IND	Connectable directed advertising event
2	GAP_SCAN_HEADER_ADV_NONCONN_IND	Non-connectable undirected advertising event
3	GAP_SCAN_HEADER_SCAN_REQ	Scanner wants information from Advertiser
4	GAP_SCAN_HEADER_SCAN_RSP	Advertiser gives more information to Scanner
5	GAP_SCAN_HEADER_CONNECT_REQ	Initiator wants to connect to Advertiser
6	GAP_SCAN_HEADER_ADV_DISCOVER_IND	Non-connectable undirected advertising event



## Scan Policy

Scan Policy

**Table: VALUES**

Value	Name	Description
0	gap_scan_policy_all	Accept All advertisement Packets (default)
1	gap_scan_policy_whitelist	Ignore advertisement packets from remote slaves not in the running whitelist

## 5.4.3 Events

Generic Access Profile class events

### Scan Response

This is a scan response event.

Table: EVENT

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x0B	lolen	Minimum payload length
2	0x06	class	Message class: Generic Access Profile
3	0x00	method	Message ID
4	int8	rsssi	RSSI value (dBm) <b>Range:</b> -103 to -38
5	uint8	packet_type	Scan response header <b>0:</b> Connectable Advertisement packet <b>2:</b> Non Connectable Advertisement packet <b>4:</b> Scan response packet <b>6:</b> Discoverable advertisement packet
6 - 11	bd_addr	sender	<i>Advertisers Bluetooth</i> address
12	uint8	address_type	Advertiser address type <b>1:</b> random address <b>0:</b> public address
13	uint8	bond	Bond handle if there is known bond for this device, 0xff otherwise
14	uint8array	data	Scan response data

#### C Functions

```
/* Callback */
struct ble_msg_gap_scan_response_evt_t{
    int8 rssi,
    uint8 packet_type,
    bd_addr sender,
    uint8 address_type,
    uint8 bond,
    uint8 data_len,
    const uint8* data_data
}
void ble_evt_gap_scan_response(
    const struct ble_msg_gap_scan_response_evt_t * msg
)
```

#### BGScript Functions

```
event gap_scan_response(rssi, packet_type, sender, address_type, bond, data_len, data_data)
```

## 5.5 Hardware

The Hardware class provides methods to access the local devices hardware interfaces such as : A/D converters, IO and timers, I2C interface etc.

### 5.5.1 Commands

Hardware class commands

#### ADC Read

This command reads the devices local A/D converter.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x02	method	Message ID
4	uint8	input	<p>Selects the ADC input.</p> <p><b>0x0:</b> AIN0 (pin 0 of port P0, denoted as A0 in the ADC row of datasheet's table 3)  <b>0x1:</b> AIN1  <b>0x2:</b> AIN2  <b>0x3:</b> AIN3  <b>0x4:</b> AIN4  <b>0x5:</b> AIN5  <b>0x6:</b> AIN6  <b>0x7:</b> AIN7  <b>0x8:</b> AIN0--AIN1 differential  <b>0x9:</b> AIN2--AIN3 differential  <b>0xa:</b> AIN4--AIN5 differential  <b>0xb:</b> AIN6--AIN7 differential  <b>0xc:</b> GND  <b>0xd:</b> Reserved  <b>0xe:</b> Temperature sensor  <b>0xf:</b> VDD/3</p>
5	uint8	decimation	<p>Select resolution and conversion rate for conversion, result is always stored in MSB bits.</p> <p><b>0:</b> 7 effective bits  <b>1:</b> 9 effective bits  <b>2:</b> 10 effective bits  <b>3:</b> 12 effective bits</p>
6	uint8	reference_selection	<p>Selects the reference for the ADC. Reference corresponds to the maximum allowed input value.</p> <p><b>0:</b> Internal reference (1.24V)  <b>1:</b> External reference on AIN7 pin  <b>2:</b> AVDD pin  <b>3:</b> External reference on AIN6--AIN7 differential input</p>

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x02	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	<b>0:</b> Command was executed successfully <b>Non-zero:</b> An error occurred

**Table: EVENTS**

Event	Description
hardare adc result	ADC read operation has completed

**C Functions**

```

/* Function */
void ble_cmd_hardware_adc_read(
    uint8 input,
    uint8 decimation,
    uint8 reference_selection
);

/* Callback */
struct ble_msg_hardware_adc_read_rsp_t{
    uint16 result
}
void ble_rsp_hardware_adc_read(
    const struct ble_msg_hardware_adc_read_rsp_t * msg
)

```

**BGScript Functions**

```

call hardware_adc_read(input, decimation, reference_selection)(result)

```

## Analog Comparator Config Irq

Configure analog comparator interrupt. Before enabling this interrupt, analog comparator has to be enabled with `hardware_analog_comparator_enable` command.

Analog comparator interrupts are generated by default on rising edge, i.e. when condition  $V_+ > V_-$  becomes true. It is also possible to configure the opposite, i.e. interrupts are generated on falling edge when  $V_+ < V_-$  becomes true. The interrupt direction may be configured with `hardware_io_port_irq_direction` command, by setting I/O-port 0 direction. Please note that this configuration affects both analog comparator interrupt direction and all I/O-port 0 pin interrupt directions.

Analog comparator interrupts are automatically disabled once triggered, so that a high frequency signal doesn't cause unintended consequences. Continuous operation may be achieved by re-enabling the interrupt as soon as the `hardware_analog_comparator_status` event is received.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x12	method	Message ID
4	<b>uint8</b>	<b>enabled</b>	1: enable interrupt 0: disable interrupt

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x12	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result Zero on success, error code otherwise

**Table: EVENTS**

event	Description
<code>hardware_analog_comparator_status</code>	Sent after comparator output changes in the configured direction

## C Functions

```
/* Function */
void ble_cmd_hardware_analog_comparator_config_irq(
    uint8 enabled
);

/* Callback */
struct ble_msg_hardware_analog_comparator_config_irq_rsp_t{
    uint16 result
}
void ble_rsp_hardware_analog_comparator_config_irq(
    const struct ble_msg_hardware_analog_comparator_config_irq_rsp_t * msg
)
```

## BGScript Functions

```
call hardware_analog_comparator_config_irq(enabled)(result)
```

## Analog Comparator Enable

Enable or disable analog comparator. Analog comparator has to be enabled prior using any other analog comparator commands.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x10	method	Message ID
4	<b>uint8</b>	<b>enable</b>	1: enable 0: disable

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x10	method	Message ID

## C Functions

```
/* Function */
void ble_cmd_hardware_analog_comparator_enable(
    uint8 enable
);

/* Callback */
void ble_rsp_hardware_analog_comparator_enable(
    const void *nul
)
```

## BGScript Functions

```
call hardware_analog_comparator_enable(enable)
```

## Analog Comparator Read

Read analog comparator output. Before using this command, analog comparator has to be enabled with `hardware_analog_comparator_enable` command.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x11	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x11	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result Zero on success, error code otherwise
6	<b>uint8</b>	<b>output</b>	Analog comparator output 1: if $V_+ > V_-$ 0: if $V_+ < V_-$

## C Functions

```
/* Function */
void ble_cmd_hardware_analog_comparator_read(
    void
);

/* Callback */
struct ble_msg_hardware_analog_comparator_read_rsp_t{
    uint16 result,
    uint8 output
}
void ble_rsp_hardware_analog_comparator_read(
    const struct ble_msg_hardware_analog_comparator_read_rsp_t * msg
)
```

## BGScript Functions


```
call hardware_analog_comparator_read()(result, output)
```

## I2c Read

Read data from I2C bus.

BLE112: uses bit-bang method, only master-mode is supported in current firmwares, I2C CLK is fixed to P1\_7 and I2C DATA to P1\_6 (pull-up must be enabled on both pins).

BLE113: only master-mode is supported in current firmwares, I2C pins are 14 (I2C CLK) and 15 (I2C DATA) as seen in the datasheet, operates at 267kHz.

 To convert a 7-bit I2C address to an 8-bit one, shift left by one bit. For example, a 7-bit address of 0x40 (dec 64) would be used as 0x80 (dec 128).

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x0A	method	Message ID
4	<b>uint8</b>	<b>address</b>	I2C's 8-bit slave address according to the note above. Keep read/write bit (LSB) set to zero, as the firmware will set it automatically.
5	<b>uint8</b>	<b>stop</b>	If nonzero Send I2C stop condition after transmission
6	<b>uint8</b>	<b>length</b>	Number of bytes to read

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x0A	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result
6	<b>uint8array</b>	<b>data</b>	Data read



## C Functions

```
/* Function */
void ble_cmd_hardware_i2c_read(
    uint8 address,
    uint8 stop,
    uint8 length
);

/* Callback */
struct ble_msg_hardware_i2c_read_rsp_t{
    uint16 result,
    uint8 data_len,
    const uint8* data_data
}
void ble_rsp_hardware_i2c_read(
    const struct ble_msg_hardware_i2c_read_rsp_t * msg
)
```

## BGScript Functions


```
call hardware_i2c_read(address, stop, length)(result, data_len, data_data)
```

## I2c Write

Write data to I2C bus.

BLE112: uses bit-bang method, only master-mode is supported in current firmwares, I2C CLK is fixed to P1\_7 and I2C DATA to P1\_6 (pull-up must be enabled on both pins).

BLE113: only master-mode is supported in current firmwares, I2C pins are 14 (I2C CLK) and 15 (I2C DATA) as seen in the datasheet, operates at 267kHz.

 To convert a 7-bit address to an 8-bit one, shift left by one bit. For example, a 7-bit address of 0x40 (dec 64) would be used as 0x80 (dec 128).

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x0B	method	Message ID
4	<b>uint8</b>	<b>address</b>	I2C's 8-bit slave address according to the note above. Keep read/write bit (LSB) set to zero, as the firmware will set it automatically.
5	<b>uint8</b>	<b>stop</b>	If nonzero Send I2C stop condition after transmission
6	<b>uint8array</b>	<b>data</b>	Data to write

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x0B	method	Message ID
4	<b>uint8</b>	<b>written</b>	Bytes written

### C Functions

```
/* Function */
void ble_cmd_hardware_i2c_write(
    uint8 address,
    uint8 stop,
    uint8 data_len,
    const uint8* data_data
);

/* Callback */
struct ble_msg_hardware_i2c_write_rsp_t{
    uint8 written
}
void ble_rsp_hardware_i2c_write(
    const struct ble_msg_hardware_i2c_write_rsp_t * msg
)
```

## BGScript Functions

```
call hardware_i2c_write(address, stop, data_len, data_data)(written)
```

## Io Port Config Direction

Configure I/O-port directions

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x03	method	Message ID
4	<b>uint8</b>	<b>port</b>	I/O PORT index: 0, 1 or 2
5	<b>uint8</b>	<b>direction</b>	Bitmask for each individual pin direction  bit0 means input (default) bit1 means output  Example: for all port's pins as output use \$FF

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x03	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	<b>0</b> : Command was executed successfully  <b>Non-zero</b> : An error occurred

### C Functions

```
/* Function */
void ble_cmd_hardware_io_port_config_direction(
    uint8 port,
    uint8 direction
);

/* Callback */
struct ble_msg_hardware_io_port_config_direction_rsp_t{
    uint16 result
}
void ble_rsp_hardware_io_port_config_direction(
    const struct ble_msg_hardware_io_port_config_direction_rsp_t * msg
)
```

### BGScript Functions

```
call hardware_io_port_config_direction(port, direction)(result)
```

## Io Port Config Function

This command configures the I/O-ports function.

If bit is set in function parameter then the corresponding I/O port is set to peripheral function, otherwise it is general purpose I/O pin.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x04	method	Message ID
4	<b>uint8</b>	<b>port</b>	I/O port 0,1,2
5	<b>uint8</b>	<b>function</b>	peripheral selection bit for pins

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x04	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	<b>0:</b> Command was executed successfully <b>Non-zero:</b> An error occurred

### C Functions

```
/* Function */
void ble_cmd_hardware_io_port_config_function(
    uint8 port,
    uint8 function
);

/* Callback */
struct ble_msg_hardware_io_port_config_function_rsp_t{
    uint16 result
}
void ble_rsp_hardware_io_port_config_function(
    const struct ble_msg_hardware_io_port_config_function_rsp_t * msg
)
```

### BGScript Functions


```
call hardware_io_port_config_function(port, function)(result)
```

## IO Port Config IRQ

### Deprecation warning

This command is deprecated in favor of `hardware_io_port_irq_enable` and `hardware_io_port_irq_direction` commands.

This command configures the local I/O-port interrupts

 Currently interrupts can not be enabled on I/O-port 2.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x00	method	Message ID
4	uint8	port	I/O port selection  <b>Possible values. 0,1 or 2</b>
5	uint8	enable_bits	interrupt enable mask for pins
6	uint8	falling_edge	Interrupt sense for port.  <b>0 : rising edge</b> <b>1 : falling edge</b>  <b>Note:</b> affects all IRQ enabled pins on the port

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x00	method	Message ID
4 - 5	uint16	result	error code, 0-success

**Table: EVENTS**

Event	Description
hardware io_port_status	Sent after pin change edge detected, and pin irq is enabled

## C Functions

```
/* Function */
void ble_cmd_hardware_io_port_config_irq(
    uint8 port,
    uint8 enable_bits,
    uint8 falling_edge
);


/* Callback */
struct ble_msg_hardware_io_port_config_irq_rsp_t{
    uint16 result
}
void ble_rsp_hardware_io_port_config_irq(
    const struct ble_msg_hardware_io_port_config_irq_rsp_t * msg
)
```

## BGScript Functions

```
call hardware_io_port_config_irq(port, enable_bits, falling_edge)(result)
```

## Io Port Config Pull

Configure I/O-port pull-up/pull-down

 Pins P1\_0 and P1\_1 do not have pullup/pulldown.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x05	method	Message ID
4	uint8	port	I/O port select: 0, 1 or 2
5	uint8	tristate_mask	If bit is set, disabled pull on pin
6	uint8	pull_up	1: pull all port's pins up 0: pull all port's pins down

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x05	method	Message ID
4 - 5	uint16	result	error code, 0-success

### C Functions

```
/* Function */
void ble_cmd_hardware_io_port_config_pull(
    uint8 port,
    uint8 tristate_mask,
    uint8 pull_up
);

/* Callback */
struct ble_msg_hardware_io_port_config_pull_rsp_t{
    uint16 result
}
void ble_rsp_hardware_io_port_config_pull(
    const struct ble_msg_hardware_io_port_config_pull_rsp_t * msg
)
```

### BGScript Functions

```
call hardware_io_port_config_pull(port, tristate_mask, pull_up)(result)
```



## Io Port Irq Direction

Set I/O-port interrupt direction. The direction applies for every pin in the given I/O-port.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x0F	method	Message ID
4	<b>uint8</b>	<b>port</b>	I/O Port Possible values are 0 or 1
5	<b>uint8</b>	<b>falling_edge</b>	Interrupt edge direction for port 0: rising edge 1: falling edge

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x0F	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result Zero on success, error code otherwise

### C Functions

```
/* Function */
void ble_cmd_hardware_io_port_irq_direction(
    uint8 port,
    uint8 falling_edge
);

/* Callback */
struct ble_msg_hardware_io_port_irq_direction_rsp_t{
    uint16 result
}
void ble_rsp_hardware_io_port_irq_direction(
    const struct ble_msg_hardware_io_port_irq_direction_rsp_t * msg
)
```

### BGScript Functions

```
call hardware_io_port_irq_direction(port, falling_edge)(result)
```

## Io Port Irq Enable

Enable I/O-port interrupts. When enabled, I/O-port interrupts are triggered on either rising or falling edge. The direction may be configured with [hardware\\_io\\_port\\_irq\\_direction](#) command.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x0E	method	Message ID
4	<b>uint8</b>	<b>port</b>	I/O Port Possible values are 0 or 1
5	<b>uint8</b>	<b>enable_bits</b>	Interrupt enable mask for pins

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x0E	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result Zero on success, error code otherwise

**Table: EVENTS**

event	Description
hardware_io_port_status	Sent after pin change edge is detected and pin IRQ is enabled

**C Functions**

```

/* Function */
void ble_cmd_hardware_io_port_irq_enable(
    uint8 port,
    uint8 enable_bits
);

/* Callback */
struct ble_msg_hardware_io_port_irq_enable_rsp_t{
    uint16 result
}
void ble_rsp_hardware_io_port_irq_enable(
    const struct ble_msg_hardware_io_port_irq_enable_rsp_t * msg
)

```

**BGScript Functions**

```

call hardware_io_port_irq_enable(port, enable_bits)(result)

```

**Io Port Read**

Read I/O-port

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x07	method	Message ID
4	<b>uint8</b>	<b>port</b>	I/O port to read 0,1,2
5	<b>uint8</b>	<b>mask</b>	I/O pins to read

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x04	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x07	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	error code, 0-success
6	<b>uint8</b>	<b>port</b>	I/O port read
7	<b>uint8</b>	<b>data</b>	I/O port pin state

#### C Functions

```

/* Function */
void ble_cmd_hardware_io_port_read(
    uint8 port,
    uint8 mask
);

/* Callback */
struct ble_msg_hardware_io_port_read_rsp_t{
    uint16 result,
    uint8 port,
    uint8 data
}
void ble_rsp_hardware_io_port_read(
    const struct ble_msg_hardware_io_port_read_rsp_t * msg
)

```

#### BGScript Functions

```

call hardware_io_port_read(port, mask)(result, port, data)

```

## Io Port Write

Write I/O-port

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x06	method	Message ID
4	<b>uint8</b>	<b>port</b>	I/O port to write to 0,1,2
5	<b>uint8</b>	<b>mask</b>	Pins to modify
6	<b>uint8</b>	<b>data</b>	Pin values to set

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x06	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	error code, 0-success

### C Functions

```
/* Function */
void ble_cmd_hardware_io_port_write(
    uint8 port,
    uint8 mask,
    uint8 data
);

/* Callback */
struct ble_msg_hardware_io_port_write_rsp_t{
    uint16 result
}
void ble_rsp_hardware_io_port_write(
    const struct ble_msg_hardware_io_port_write_rsp_t * msg
)
```

### BGScript Functions

```
call hardware_io_port_write(port, mask, data)(result)
```

## Set Rxgain

This command sets the radio receiver (RX) sensitivity to either high (default) or standard. The exact sensitivity value is dependent on the used hardware (refer to the appropriate data sheet).

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x13	method	Message ID
4	uint8	gain	0: standard gain 1: high gain (default)

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x13	method	Message ID

### C Functions

```
/* Function */  
void ble_cmd_hardware_set_rxgain(  
    uint8 gain  
);  
  
/* Callback */  
void ble_rsp_hardware_set_rxgain(  
    const void *nul  
)
```

### BGScript Functions

```
call hardware_set_rxgain(gain)
```

## Set Soft Timer

This command configures the local software timer. The timer is 22 bits so the maximum value with BLE112 is  $2^{22} = 4194304/32768\text{Hz} = 128$  seconds. With BLED112 USB dongle the maximum value is  $2^{22} = 4194304/32000\text{Hz} = 131$  seconds.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x06	lolen	Minimum payload length

Byte	Type	Name	Description
2	0x07	class	Message class: Hardware
3	0x01	method	Message ID
4 - 7	uint32	time	<p>Timer interrupt period in units of local crystal frequency.</p> <p><b>time</b> = 1/32768 seconds for modules where the external sleep oscillator must be enabled.</p> <p><b>time</b> = 1/32000 seconds for the dongle where internal RC oscillator is used.</p> <p>If time is 0, scheduled timer is removed.</p>
8	uint8	handle	Handle that is sent back within triggered event at timeout
9	uint8	single_shot	<p>Timer mode.</p> <p><b>0</b> = Repeating timeout: the timer event is triggered at intervals defined with <b>time</b>. The stack only supports one repeating timer at a time for reliability purposes. Starting a repeating soft timer removes the current one if any.</p> <p><b>1</b> = Single timeout: the timer event is triggered only once after a period defined with <b>time</b>.</p>

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x01	method	Message ID
4 - 5	uint16	result	Command result

**Table: EVENTS**

Event	Description
hardware soft_timer	Sent after specified interval

```

C Functions

/* Function */
void ble_cmd_hardware_set_soft_timer(
    uint32 time,
    uint8 handle,
    uint8 single_shot
);

/* Callback */
struct ble_msg_hardware_set_soft_timer_rsp_t{
    uint16 result
}
void ble_rsp_hardware_set_soft_timer(
    const struct ble_msg_hardware_set_soft_timer_rsp_t * msg
)

```

## BGScript Functions

```
call hardware_set_soft_timer(time, handle, single_shot)(result)
```

## Set Txpower

Set TX Power

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x0C	method	Message ID
4	<b>uint8</b>	<b>power</b>	TX power level to use  <b>Range: 0 to 15 which give the real TX power from -23 to +3 dBm</b>

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x0C	method	Message ID

### C Functions

```
/* Function */
void ble_cmd_hardware_set_txpower(
    uint8 power
);

/* Callback */
void ble_rsp_hardware_set_txpower(
    const void *nul
)
```

### BGScript Functions

```
call hardware_set_txpower(power)
```



## Spi Config

Configure SPI

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x06	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x08	method	Message ID
4	<b>uint8</b>	<b>channel</b>	USART channel 0,1
5	<b>uint8</b>	<b>polarity</b>	Clock polarity 0,1
6	<b>uint8</b>	<b>phase</b>	Clock phase 0,1
7	<b>uint8</b>	<b>bit_order</b>	Endianness select, 0-LSB 1-MSB first
8	<b>uint8</b>	<b>baud_e</b>	baud rate exponent value
9	<b>uint8</b>	<b>baud_m</b>	baud rate mantissa value

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x08	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	error code, 0-success

### C Functions

```
/* Function */
void ble_cmd_hardware_spi_config(
    uint8 channel,
    uint8 polarity,
    uint8 phase,
    uint8 bit_order,
    uint8 baud_e,
    uint8 baud_m
);

/* Callback */
struct ble_msg_hardware_spi_config_rsp_t{
    uint16 result
}
void ble_rsp_hardware_spi_config(
    const struct ble_msg_hardware_spi_config_rsp_t * msg
)
```

### BGScript Functions

```
call hardware_spi_config(channel, polarity, phase, bit_order, baud_e, baud_m)(result)
```

## Spi Transfer

This command is used to transfer SPI data when in master mode. Max 64 bytes can be transferred.

Note: Slave Select pin is not controlled automatically when transferring data while in SPI Master mode, so it must be controlled by the application using normal GPIO control commands like `hardware_io_port_write` if needed.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x09	method	Message ID
4	<b>uint8</b>	<b>channel</b>	SPI channel (0 or 1)
5	<b>uint8array</b>	<b>data</b>	Data to transmit (64 bytes at max)

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x04	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x09	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	error code, 0-success
6	<b>uint8</b>	<b>channel</b>	SPI channel used
7	<b>uint8array</b>	<b>data</b>	data received

### C Functions

```
/* Function */
void ble_cmd_hardware_spi_transfer(
    uint8 channel,
    uint8 data_len,
    const uint8* data_data
);

/* Callback */
struct ble_msg_hardware_spi_transfer_rsp_t{
    uint16 result,
    uint8 channel,
    uint8 data_len,
    const uint8* data_data
}
void ble_rsp_hardware_spi_transfer(
    const struct ble_msg_hardware_spi_transfer_rsp_t * msg
)
```

### BGScript Functions

```
call hardware_spi_transfer(channel, data_len, data_data)(result, channel, data_len, data_data)
```

## Timer Comparator

Set comparator for timer channel.

This command may be used to generate e.g. PWM signals with hardware timer. More information on different comparator modes and their usage may be found from Texas Instruments CC2540 User's Guide (SWRU191B), section 9.8 Output Compare Mode.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x05	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x0D	method	Message ID
4	uint8	timer	Timer
5	uint8	channel	Timer channel
6	uint8	mode	Comparator mode
7 - 8	uint16	comparator_value	Comparator value

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x0D	method	Message ID
4 - 5	uint16	result	Command result

### C Functions

```
/* Function */
void ble_cmd_hardware_timer_comparator(
    uint8 timer,
    uint8 channel,
    uint8 mode,
    uint16 comparator_value
);

/* Callback */
struct ble_msg_hardware_timer_comparator_rsp_t{
    uint16 result
}
void ble_rsp_hardware_timer_comparator(
    const struct ble_msg_hardware_timer_comparator_rsp_t * msg
)
```

### BGScript Functions

```
call hardware_timer_comparator(timer, channel, mode, comparator_value)(result)
```

## Usb Enable

This command activates (enable) or deactivates USB controller. The USB controller is by default activated when USB is set on in the hardware configuration for the project. On the other hand, the USB controller cannot be activated if the USB is not set on in the hardware configuration.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x14	method	Message ID
4	<b>uint8</b>	<b>enable</b>	1: enable 0: disable

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x14	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result Zero on success, error code otherwise

### C Functions

```
/* Function */
void ble_cmd_hardware_usb_enable(
    uint8 enable
);

/* Callback */
struct ble_msg_hardware_usb_enable_rsp_t{
    uint16 result
}
void ble_rsp_hardware_usb_enable(
    const struct ble_msg_hardware_usb_enable_rsp_t * msg
)
```

### BGScript Functions

```
call hardware_usb_enable(enable)(result)
```

## 5.5.2 Events

Hardware class events

### ADC Result

This events is produced when an A/D converter result is received.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x03	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x02	method	Message ID
4	<b>uint8</b>	<b>input</b>	A/D input from which value is received from
5 - 6	<b>int16</b>	<b>value</b>	A/D value. In the example case of 12 effective bits decimation, you will need to read the left-most 12 bits of the value to interpret it. It is a 12-bit 2's complement value left-aligned to the MSB of the 16-bit container, which means that negative values (which are uncommon but not impossible) are 0x8000 or higher, and positive values are 0x7FF0 or lower. Since it is only 12 bits, the last nibble will always be 0 (0xnnn0). You can divide the value by 16 (that is, bit-shift 4 bits to the right) to obtain the expected 12-bit value.

**C Functions**

```

/* Callback */
struct ble_msg_hardware_adc_result_evt_t{
    uint8 input,
    int16 value
}
void ble_evt_hardware_adc_result(
    const struct ble_msg_hardware_adc_result_evt_t * msg
)

```

**BGScript Functions**

```

event hardware_adc_result(input, value)

```

## Analog Comparator Status

This event is produced when analog comparator output changes in the configured direction.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hilen	Message type: event
1	0x05	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x03	method	Message ID
4 - 7	<b>uint32</b>	<b>timestamp</b>	Value of internal timer Range from 0 to 2 <sup>24</sup> -1
8	<b>uint8</b>	<b>output</b>	Analog comparator output  1: if $V_+ > V_-$ 0: if $V_+ < V_-$

### C Functions

```

/* Callback */
struct ble_msg_hardware_analog_comparator_status_evt_t{
    uint32 timestamp,
    uint8 output
}
void ble_evt_hardware_analog_comparator_status(
    const struct ble_msg_hardware_analog_comparator_status_evt_t * msg
)

```

### BGScript Functions

```

event hardware_analog_comparator_status(timestamp, output)

```

## IO Port Status

This event is produced when I/O port status changes.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hilen	Message type: event
1	0x07	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x00	method	Message ID
4 - 7	<b>uint32</b>	<b>timestamp</b>	Value of internal timer  <b>Range</b> : 0 to 2 <sup>24</sup> -1
8	<b>uint8</b>	<b>port</b>	I/O port

Byte	Type	Name	Description
9	uint8	irq	I/O flags Tells which port caused interrupt (bitmask).
10	uint8	state	Current status of all I/Os in <b>port</b> (bitmask).

#### C Functions

```

/* Callback */
struct ble_msg_hardware_io_port_status_evt_t{
    uint32 timestamp,
    uint8 port,
    uint8 irq,
    uint8 state
}
void ble_evt_hardware_io_port_status(
    const struct ble_msg_hardware_io_port_status_evt_t * msg
)

```

#### BGScript Functions

```

event hardware_io_port_status(timestamp, port, irq, state)

```

## Soft Timer

This event is produced when software timer interrupt is generated.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x01	lolen	Minimum payload length
2	0x07	class	Message class: Hardware
3	0x01	method	Message ID
4	<b>uint8</b>	<b>handle</b>	The software timer handle

### C Functions

```
/* Callback */
struct ble_msg_hardware_soft_timer_evt_t{
    uint8 handle
}
void ble_evt_hardware_soft_timer(
    const struct ble_msg_hardware_soft_timer_evt_t * msg
)
```

### BGScript Functions

```
event hardware_soft_timer(handle)
```



## 5.6 Persistent Store

The Persistent Store (PS) class provides methods to read write and dump the local devices parameters (PS keys).

### 5.6.1 Commands

Persistent Store class commands

#### Erase Page

Erase flash page allocated for user-data. The 2KB pages dedicated to user data are referred to by their index where first page has index of 0.

When flash page is erased all bytes inside page are set to 0xff.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x06	method	Message ID
4	<b>uint8</b>	<b>page</b>	Index of memory page to erase

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x06	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result

#### C Functions

```
/* Function */
void ble_cmd_flash_erase_page(
    uint8 page
);

/* Callback */
struct ble_msg_flash_erase_page_rsp_t{
    uint16 result
}
void ble_rsp_flash_erase_page(
    const struct ble_msg_flash_erase_page_rsp_t * msg
)
```

#### BGScript Functions

```
call flash_erase_page(page)(result)
```

## PS Defrag

This command defragments the Persistent Store.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x00	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x00	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x00	method	Message ID

### C Functions

```
/* Function */
void ble_cmd_flash_ps_defrag(
    void
);

/* Callback */
void ble_rsp_flash_ps_defrag(
    const void *nul
)
```

### BGScript Functions

```
call flash_ps_defrag()
```

## PS Dump

This command dumps all Persistent Store keys.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x01	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x00	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x01	method	Message ID

**Table: EVENTS**

Event	Description
flash ps_key	PS Key contents

### C Functions

```
/* Function */
void ble_cmd_flash_ps_dump(
    void
);

/* Callback */
void ble_rsp_flash_ps_dump(
    const void *nul
)
```

### BGScript Functions

```
call flash_ps_dump()
```

## PS Erase All

This command erases all Persistent Store keys.

NOTE: Reboot is required after using this command, device will generate missing encryption keys and update bonding cache on boot.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x02	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x00	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x02	method	Message ID

### C Functions

```
/* Function */
void ble_cmd_flash_ps_erase_all(
    void
);

/* Callback */
void ble_rsp_flash_ps_erase_all(
    const void *nul
)
```

### BGScript Functions

```
call flash_ps_erase_all()
```

## PS Erase

This command erases a Persistent Store key given as parameter.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x05	method	Message ID
4 - 5	<b>uint16</b>	<b>key</b>	Key to erase

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x00	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x05	method	Message ID

### C Functions

```
/* Function */
void ble_cmd_flash_ps_erase(
    uint16 key
);

/* Callback */
void ble_rsp_flash_ps_erase(
    const void *nul
)
```

### BGScript Functions

```
call flash_ps_erase(key)
```

## PS Load

This command reads a Persistent Store key from the local device.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x04	method	Message ID
4 - 5	<b>uint16</b>	<b>key</b>	Key to load Keys 8000 to 807F can be read.

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x03	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x04	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	0 : the read was successful
6	<b>uint8array</b>	<b>value</b>	Key's value

### C Functions

```
/* Function */
void ble_cmd_flash_ps_load(
    uint16 key
);

/* Callback */
struct ble_msg_flash_ps_load_rsp_t{
    uint16 result,
    uint8 value_len,
    const uint8* value_data
}
void ble_rsp_flash_ps_load(
    const struct ble_msg_flash_ps_load_rsp_t * msg
)
```

### BGScript Functions

```
call flash_ps_load(key)(result, value_len, value_data)
```

## PS Save

This command saves a Persistent Store (PS) key to the local device. The size of a single PS-key is 32 bytes and a total of 128 keys are available.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x03	method	Message ID
4 - 5	<b>uint16</b>	<b>key</b>	Key to save.  Keys 8000 to 807F can be used for persistent storage of user data.
6	<b>uint8array</b>	<b>value</b>	Value of the key

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x02	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x03	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	0 : the write was successful

### C Functions

```
/* Function */
void ble_cmd_flash_ps_save(
    uint16 key,
    uint8 value_len,
    const uint8* value_data
);

/* Callback */
struct ble_msg_flash_ps_save_rsp_t{
    uint16 result
}
void ble_rsp_flash_ps_save(
    const struct ble_msg_flash_ps_save_rsp_t * msg
)
```

### BGScript Functions

```
call flash_ps_save(key, value_len, value_data)(result)
```

## Read Data

Read data from user data area.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x05	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x08	method	Message ID
4 - 7	<b>uint32</b>	<b>address</b>	Offset in the user data space to start reading from
8	<b>uint8</b>	<b>length</b>	Length to read

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x08	method	Message ID
4	<b>uint8array</b>	<b>data</b>	Data read from flash.  length is set to 0 if read address was invalid

### C Functions

```
/* Function */
void ble_cmd_flash_read_data(
    uint32 address,
    uint8 length
);

/* Callback */
struct ble_msg_flash_read_data_rsp_t{
    uint8 data_len,
    const uint8* data_data
}
void ble_rsp_flash_read_data(
    const struct ble_msg_flash_read_data_rsp_t * msg
)
```

### BGScript Functions

```
call flash_read_data(address, length)(data_len, data_data)
```

## Write Data

Write data to user data area.

Note: bits can only be turned from 1 to 0. Bits can only be turned back to 1 by erasing entire 2KB page with command `flash_erase_page`.



The amount of flash to reserve for the user data manipulated via the flash commands is defined via the `user_data` option in the `config.xml`

For example, `<user_data size="2048" />` allocates 2048 bytes which can be used by this command.

The limitation is how much flash is left, and that depends how large the gatt-configuration or BGScript is. The compiler will give an error if there is not enough space for data.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x05	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x07	method	Message ID
4 - 7	<b>uint32</b>	<b>address</b>	Offset in the user data space to write to
8	<b>uint8array</b>	<b>data</b>	Data to write

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x07	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result

#### C Functions

```

/* Function */
void ble_cmd_flash_write_data(
    uint32 address,
    uint8 data_len,
    const uint8* data_data
);

/* Callback */
struct ble_msg_flash_write_data_rsp_t{
    uint16 result
}
void ble_rsp_flash_write_data(
    const struct ble_msg_flash_write_data_rsp_t * msg
)

```

#### BGScript Functions

```
call flash_write_data(address, data_len, data_data)(result)
```

## 5.6.2 Events

Persistent Store class events

### PS Key

This event is produced during a Persistent Store key dump (launched with the command `flash_ps_dump`) for every dumped key.

The event reporting a PS Key with address of `0xFFFF` and empty value is always sent: it is meant to indicate that all existing PS Keys have been read.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x03	lolen	Minimum payload length
2	0x01	class	Message class: Persistent Store
3	0x00	method	Message ID
4 - 5	<b>uint16</b>	<b>key</b>	Persistent Store key ID
6	<b>uint8array</b>	<b>value</b>	Key value

#### C Functions

```
/* Callback */
struct ble_msg_flash_ps_key_evt_t{
    uint16 key,
    uint8 value_len,
    const uint8* value_data
}
void ble_evt_flash_ps_key(
    const struct ble_msg_flash_ps_key_evt_t * msg
)
```

#### BGScript Functions

```
event flash_ps_key(key, value_len, value_data)
```

## 5.7 Security Manager

The Security Manager (SM) class provides access to the Bluetooth low energy Security Manager methods such as : bonding management and modes and encryption control.

### 5.7.1 Commands

Security Manager class commands

#### Delete Bonding

This command deletes a bonding from the local security database. There can be a maximum of 8 bonded devices stored at the same time, and one of them must be deleted if you need bonding with a 9th device.

Table: COMMAND

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x02	method	Message ID
4	uint8	handle	Bonding handle of a device. This handle can be obtained for example from events like: <a href="#">Scan Response Status</a> If handle is 0xff, then all bondings are deleted

Table: RESPONSE

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x02	method	Message ID
4 - 5	uint16	result	Command result

#### C Functions

```
/* Function */
void ble_cmd_sm_delete_bonding(
    uint8 handle
);

/* Callback */
struct ble_msg_sm_delete_bonding_rsp_t{
    uint16 result
}
void ble_rsp_sm_delete_bonding(
    const struct ble_msg_sm_delete_bonding_rsp_t * msg
)
```

## BGScript Functions

```
call sm_delete_bonding(handle)(result)
```

## Encrypt Start

This command starts the encryption for a given connection.

|

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x00	method	Message ID
4	uint8	handle	Connection handle
5	uint8	bonding	Create bonding if devices are not already bonded

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x03	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x00	method	Message ID
4	uint8	handle	Connection handle
5 - 6	uint16	result	0 : the encryption was started successfully

**Table: EVENTS**

Event	Description
sm_bonding_fail	Sent if encryption or bonding fails
connection_status	Sent when connectino is encrypted

### C Functions

```
/* Function */
void ble_cmd_sm_encrypt_start(
    uint8 handle,
    uint8 bonding
);

/* Callback */
struct ble_msg_sm_encrypt_start_rsp_t{
    uint8 handle,
    uint16 result
}
void ble_rsp_sm_encrypt_start(
    const struct ble_msg_sm_encrypt_start_rsp_t * msg
)
```

## BGScript Functions

```
call sm_encrypt_start(handle, bonding)(handle, result)
```

## Get Bonds

List all bonded devices. There can be a maximum of 8 bonded devices. The information related to the bonded devices is stored in the Flash memory, so it is persistent across resets and power-cycles.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x05	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x05	method	Message ID
4	<b>uint8</b>	<b>bonds</b>	Num of currently bonded devices

**Table: EVENTS**

Event	Description
sm bond_status	Bond status for each bonded device

### C Functions

```
/* Function */
void ble_cmd_sm_get_bonds(
    void
);

/* Callback */
struct ble_msg_sm_get_bonds_rsp_t{
    uint8 bonds
}
void ble_rsp_sm_get_bonds(
    const struct ble_msg_sm_get_bonds_rsp_t * msg
)
```

### BGScript Functions

```
call sm_get_bonds()(bonds)
```

## Passkey Entry

A command used to enter a passkey required for Man-in-the-Middle pairing.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x05	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x04	method	Message ID
4	<b>uint8</b>	<b>handle</b>	Connection Handle
5 - 8	<b>uint32</b>	<b>passkey</b>	Passkey <b>Range:</b> 000000-999999

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x02	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x04	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result

'0

### C Functions

```
/* Function */
void ble_cmd_sm_passkey_entry(
    uint8 handle,
    uint32 passkey
);

/* Callback */
struct ble_msg_sm_passkey_entry_rsp_t{
    uint16 result
}
void ble_rsp_sm_passkey_entry(
    const struct ble_msg_sm_passkey_entry_rsp_t * msg
)
```

### BGScript Functions

```
call sm_passkey_entry(handle, passkey)(result)
```



## Set Bondable Mode

Set device to bondable mode

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x01	method	Message ID
4	<b>uint8</b>	<b>bondable</b>	Enables or disables bonding mode <b>0</b> : the device is not bondable <b>1</b> : the device is bondable

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x01	method	Message ID

### C Functions

```
/* Function */
void ble_cmd_sm_set_bondable_mode(
    uint8 bondable
);

/* Callback */
void ble_rsp_sm_set_bondable_mode(
    const void *nul
)
```

### BGScript Functions

```
call sm_set_bondable_mode(bondable)
```

## Set Oob Data

Set out-of-band encryption data for device

Device does not allow any other kind of pairing except oob if oob data is set.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x06	method	Message ID
4	<b>uint8array</b>	<b>oob</b>	OOB data to set, if empty clear oob data This must be 16 or 0 octets long.

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x06	method	Message ID

### C Functions

```
/* Function */
void ble_cmd_sm_set_oob_data(
    uint8 oob_len,
    const uint8* oob_data
);

/* Callback */
void ble_rsp_sm_set_oob_data(
    const void *nul
)
```

### BGScript Functions

```
call sm_set_oob_data(oob_len, oob_data)
```

## Set Parameters

Configure Security Manager

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x03	method	Message ID
4	uint8	mitm	1: Man-in-the-middle protection required 0: No Man-in-the-middle protection (default)
5	uint8	min_key_size	Minimum key size in bytes, range 7-16 Default: 7Bytes = 56bits
6	uint8	io_capabilities	See: <a href="#">SMP IO Capabilities</a> Default: No Input and No Output

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x03	method	Message ID

### C Functions

```
/* Function */
void ble_cmd_sm_set_parameters(
    uint8 mitm,
    uint8 min_key_size,
    uint8 io_capabilities
);

/* Callback */
void ble_rsp_sm_set_parameters(
    const void *nul
)
```

### BGScript Functions

```
call sm_set_parameters(mitm, min_key_size, io_capabilities)
```

## 5.7.2 Enumerations

Security Manager commands

### Bonding Keys

Bonding information stored

**Table: VALUES**

Value	Name	Description
0x01	sm_bonding_key_ltk	LTK saved in master
0x02	sm_bonding_key_addr_public	Public Address
0x04	sm_bonding_key_addr_static	Static Address
0x08	sm_bonding_key_irk	Identity resolving key for resolvable private addresses
0x10	sm_bonding_key_edivrand	EDIV+RAND received from slave
0x20	sm_bonding_key_csrk	Connection signature resolving key
0x40	sm_bonding_key_masterid	EDIV+RAND sent to master

**Table: VALUES**

Value	Name	Description
1	sm_bonding_key_ltk	LTK saved in master
2	sm_bonding_key_addr_public	Public Address
4	sm_bonding_key_addr_static	Static Address
8	sm_bonding_key_irk	Identity resolving key for resolvable private addresses
16	sm_bonding_key_edivrand	EDIV+RAND received from slave
32	sm_bonding_key_csrk	Connection signature resolving key
64	sm_bonding_key_masterid	EDIV+RAND sent to master

## SMP IO Capabilities

SMP IO Capabilities

**Table: VALUES**

Value	Name	Description
0	sm_io_capability_displayonly	Display Only
1	sm_io_capability_displayyesno	Display with Yes/No-buttons
2	sm_io_capability_keyboardonly	Keyboard Only
3	sm_io_capability_noinputnooutput	No Input and No Output
4	sm_io_capability_keyboarddisplay	Display with Keyboard

**Table: VALUES**

Value	Name	Description
0	sm_io_capability_displayonly	Display Only
1	sm_io_capability_displayyesno	Display with Yes/No-buttons
2	sm_io_capability_keyboardonly	Keyboard Only
3	sm_io_capability_noinputnooutput	No Input and No Output
4	sm_io_capability_keyboarddisplay	Display with Keyboard

### 5.7.3 Events

Security Manager class events

#### Bonding Fail

Link bonding has failed

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x03	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x01	method	Message ID
4	<b>uint8</b>	<b>handle</b>	Connection handle
5 - 6	<b>uint16</b>	<b>result</b>	Encryption status, describes error that occurred during bonding

#### C Functions

```
/* Callback */
struct ble_msg_sm_bonding_fail_evt_t{
    uint8 handle,
    uint16 result
}
void ble_evt_sm_bonding_fail(
    const struct ble_msg_sm_bonding_fail_evt_t * msg
)
```

#### BGScript Functions

```
event sm_bonding_fail(handle, result)
```

## Bond Status

Bond status information

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x04	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x04	method	Message ID
4	<b>uint8</b>	<b>bond</b>	Bond handle
5	<b>uint8</b>	<b>keysize</b>	Encryption key size used in long-term key
6	<b>uint8</b>	<b>mitm</b>	Was mitm used in pairing
7	<b>uint8</b>	<b>keys</b>	Keys stored for bond see:enum sm_bonding_key

### C Functions

```
/* Callback */
struct ble_msg_sm_bond_status_evt_t{
    uint8 bond,
    uint8 keysize,
    uint8 mitm,
    uint8 keys
}
void ble_evt_sm_bond_status(
    const struct ble_msg_sm_bond_status_evt_t * msg
)
```

### BGScript Functions

```
event sm_bond_status(bond, keysize, mitm, keys)
```

## Passkey Display

Passkey to be entered to remote device

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x05	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x02	method	Message ID
4	<b>uint8</b>	<b>handle</b>	Bluetooth connection handle
5 - 8	<b>uint32</b>	<b>passkey</b>	Passkey range 000000-999999

### C Functions

```
/* Callback */
struct ble_msg_sm_passkey_display_evt_t{
    uint8 handle,
    uint32 passkey
}
void ble_evt_sm_passkey_display(
    const struct ble_msg_sm_passkey_display_evt_t * msg
)
```

### BGScript Functions

```
event sm_passkey_display(handle, passkey)
```



## Passkey Request

Security Manager requests user to enter passkey

Use [Passkey Entry](#) - command to respond to request

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x01	lolen	Minimum payload length
2	0x05	class	Message class: Security Manager
3	0x03	method	Message ID
4	<b>uint8</b>	<b>handle</b>	Connection handle

### C Functions

```
/* Callback */
struct ble_msg_sm_passkey_request_evt_t{
    uint8 handle
}
void ble_evt_sm_passkey_request(
    const struct ble_msg_sm_passkey_request_evt_t * msg
)
```

### BGScript Functions

```
event sm_passkey_request(handle)
```

## 5.8 System

The System class provides access to the local device and contains functions for example to query Bluetooth address, firmware version, packet counters etc.

### 5.8.1 Commands

System class commands

#### Address Get

This command reads the local devices public Bluetooth address.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x02	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x06	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x02	method	Message ID
4 - 9	<b>bd_addr</b>	<b>address</b>	Bluetooth address of the local device

#### C Functions

```
/* Function */
void ble_cmd_system_address_get(
    void
);

/* Callback */
struct ble_msg_system_address_get_rsp_t{
    bd_addr address
}
void ble_rsp_system_address_get(
    const struct ble_msg_system_address_get_rsp_t * msg
)
```

#### BGScript Functions

```
call system_address_get()(address)
```

## Aes Decrypt

This command decrypts the given data using the AES algorithm with the predefined key ([system\\_aes\\_setkey](#)).

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x11	method	Message ID
4	<b>uint8array</b>	<b>data</b>	Data to be decrypted Maximum size is 16 bytes, will be zero padded if less.

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x11	method	Message ID
4	<b>uint8array</b>	<b>data</b>	Decrypted data

### C Functions

```
/* Function */
void ble_cmd_system_aes_decrypt(
    uint8 data_len,
    const uint8* data_data
);

/* Callback */
struct ble_msg_system_aes_decrypt_rsp_t{
    uint8 data_len,
    const uint8* data_data
}
void ble_rsp_system_aes_decrypt(
    const struct ble_msg_system_aes_decrypt_rsp_t * msg
)
```

### BGScript Functions

```
call system_aes_decrypt(data_len, data_data)(data_len, data_data)
```

## Aes Encrypt

This command encrypts the given data using the AES algorithm with the predefined key ([system\\_aes\\_setkey](#)).

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command

Byte	Type	Name	Description
1	0x01	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x10	method	Message ID
4	<b>uint8array</b>	<b>data</b>	Data to be encrypted  Maximum size is 16 bytes, will be zero padded if less.

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x10	method	Message ID
4	<b>uint8array</b>	<b>data</b>	Encrypted data

#### C Functions

```

/* Function */
void ble_cmd_system_aes_encrypt(
    uint8 data_len,
    const uint8* data_data
);

/* Callback */
struct ble_msg_system_aes_encrypt_rsp_t{
    uint8 data_len,
    const uint8* data_data
}
void ble_rsp_system_aes_encrypt(
    const struct ble_msg_system_aes_encrypt_rsp_t * msg
)

```

#### BGScript Functions

```

call system_aes_encrypt(data_len, data_data)(data_len, data_data)

```

## Aes Setkey

This command defines the encryption key that will be used with the AES encrypt and decrypt commands.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x0F	method	Message ID
4	<b>uint8array</b>	<b>key</b>	Encryption key  Key size is 16 bytes, will be zero padded if less.

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x0F	method	Message ID

**C Functions**

```

/* Function */
void ble_cmd_system_aes_setkey(
    uint8 key_len,
    const uint8* key_data
);

/* Callback */
void ble_rsp_system_aes_setkey(
    const void *nul
)

```

**BGScript Functions**

```
call system_aes_setkey(key_len, key_data)
```

**Endpoint Rx**

Read data from an endpoint (i.e., data source, e.g., UART), error is returned if endpoint does not have enough data.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x0D	method	Message ID
4	<b>uint8</b>	<b>endpoint</b>	Endpoint index to read data from
5	<b>uint8</b>	<b>size</b>	Size of data to read

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hilen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x0D	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result
6	<b>uint8array</b>	<b>data</b>	Data read from endpoint

## C Functions

```
/* Function */
void ble_cmd_system_endpoint_rx(
    uint8 endpoint,
    uint8 size
);

/* Callback */
struct ble_msg_system_endpoint_rx_rsp_t{
    uint16 result,
    uint8 data_len,
    const uint8* data_data
}
void ble_rsp_system_endpoint_rx(
    const struct ble_msg_system_endpoint_rx_rsp_t * msg
)
```

## BGScript Functions

```
call system_endpoint_rx(endpoint, size)(result, data_len, data_data)
```

## Endpoint Set Watermarks

Set watermarks on both input and output sides of an endpoint. This is used to enable and disable the following events: `system_endpoint_watermark_tx` and `system_endpoint_watermark_rx`

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x0E	method	Message ID
4	<b>uint8</b>	<b>endpoint</b>	Endpoint index to set watermarks.
5	<b>uint8</b>	<b>rx</b>	Watermark position on receive buffer  <b>0xFF</b> : watermark is not modified <b>0x00</b> : disables watermark <b>1-63</b> : sets watermark position
6	<b>uint8</b>	<b>tx</b>	Watermark position on transmit buffer  <b>0xFF</b> : watermark is not modified <b>0x00</b> : disables watermark <b>1-63</b> : sets watermark position

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x0E	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result

### C Functions

```

/* Function */
void ble_cmd_system_endpoint_set_watermarks(
    uint8 endpoint,
    uint8 rx,
    uint8 tx
);

/* Callback */
struct ble_msg_system_endpoint_set_watermarks_rsp_t{
    uint16 result
}
void ble_rsp_system_endpoint_set_watermarks(
    const struct ble_msg_system_endpoint_set_watermarks_rsp_t * msg
)

```

### BGScript Functions

```
call system_endpoint_set_watermarks(endpoint, rx, tx)(result)
```

## Endpoint Tx

Send data to endpoint, error is returned if endpoint does not have enough space

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x09	method	Message ID
4	<b>uint8</b>	<b>endpoint</b>	Endpoint index to send data to
5	<b>uint8array</b>	<b>data</b>	data to send

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x09	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	Command result

### C Functions

```
/* Function */
void ble_cmd_system_endpoint_tx(
    uint8 endpoint,
    uint8 data_len,
    const uint8* data_data
);

/* Callback */
struct ble_msg_system_endpoint_tx_rsp_t{
    uint16 result
}
void ble_rsp_system_endpoint_tx(
    const struct ble_msg_system_endpoint_tx_rsp_t * msg
)
```

### BGScript Functions

```
call system_endpoint_tx(endpoint, data_len, data_data)(result)
```



## Get Connections

This command reads the number of supported connections from the local device.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x06	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x01	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x06	method	Message ID
4	uint8	maxconn	Max supported connections

**Table: EVENTS**

Event	Description
connection status	Connection status for each connection handle

### C Functions

```
/* Function */
void ble_cmd_system_get_connections(
    void
);

/* Callback */
struct ble_msg_system_get_connections_rsp_t{
    uint8 maxconn
}
void ble_rsp_system_get_connections(
    const struct ble_msg_system_get_connections_rsp_t * msg
)
```

### BGScript Functions

```
call system_get_connections()(maxconn)
```

## Get Counters

Read packet counters and resets them, also returns available packet buffers.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x05	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x05	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x05	method	Message ID
4	uint8	txok	Acknowledgements received for sent packets
5	uint8	txretry	Number of packets retransmitted
6	uint8	rxok	packets received where crc was ok
7	uint8	rxfail	packets received where crc failed
8	uint8	mbuf	Available packet buffers

### C Functions

```
/* Function */
void ble_cmd_system_get_counters(
    void
);

/* Callback */
struct ble_msg_system_get_counters_rsp_t{
    uint8 txok,
    uint8 txretry,
    uint8 rxok,
    uint8 rxfail,
    uint8 mbuf
}
void ble_rsp_system_get_counters(
    const struct ble_msg_system_get_counters_rsp_t * msg
)
```

### BGScript Functions

```
call system_get_counters()(txok, txretry, rxok, rxfail, mbuf)
```

## Get Info

This command reads the local devices software and hardware versions.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x08	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x0C	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x08	method	Message ID
4 - 5	<b>uint16</b>	<b>major</b>	Major software version
6 - 7	<b>uint16</b>	<b>minor</b>	Minor software version
8 - 9	<b>uint16</b>	<b>patch</b>	Patch ID
10 - 11	<b>uint16</b>	<b>build</b>	Build version
12 - 13	<b>uint16</b>	<b>ll_version</b>	Link layer version
14	<b>uint8</b>	<b>protocol_version</b>	BGAPI protocol version
15	<b>uint8</b>	<b>hw</b>	Hardware version

### C Functions

```
/* Function */
void ble_cmd_system_get_info(
    void
);

/* Callback */
struct ble_msg_system_get_info_rsp_t{
    uint16 major,
    uint16 minor,
    uint16 patch,
    uint16 build,
    uint16 ll_version,
    uint8 protocol_version,
    uint8 hw
}
void ble_rsp_system_get_info(
    const struct ble_msg_system_get_info_rsp_t * msg
)
```

### BGScript Functions

```
call system_get_info()(major, minor, patch, build, ll_version, protocol_version, hw)
```

## Hello

This command can be used to test if the local device is functional. Similar to a typical "AT" -> "OK" test.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x01	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x00	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x01	method	Message ID

### C Functions

```
/* Function */
void ble_cmd_system_hello(
    void
);

/* Callback */
void ble_rsp_system_hello(
    const void *nul
)
```

### BGScript Functions

```
call system_hello()
```

## Reset

This command resets the local device immediately. The command does not have a response.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x00	method	Message ID
4	uint8	boot_in_dfu	Selects the boot mode <b>0 : boot to main program</b> <b>1 : boot to DFU</b>

**Table: EVENTS**

Event	Description
system boot	Sent when device has completed reset

### C Functions

```
/* Function */  
void ble_cmd_system_reset(  
    uint8 boot_in_dfu  
);
```

### BGScript Functions

```
call system_reset(boot_in_dfu)
```

## Whitelist Append

Add an entry to the running white list. By the white list you can define for example the remote devices which are allowed to establish a connection. See also [Set Filtering](#) and [Connect Selective](#) (if the white list is empty they will not be active). Do not use this command while advertising, scanning, or while being connected. The current list is discarded upon reset or power-cycle.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x07	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x0A	method	Message ID
4 - 9	<b>bd_addr</b>	<b>address</b>	Bluetooth device address to add to the running white list Maximum of 8 can be stored before you must clear or remove entires
10	<b>uint8</b>	<b>address_type</b>	Bluetooth address type

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x0A	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	

### C Functions

```
/* Function */
void ble_cmd_system_whitelist_append(
    bd_addr address,
    uint8 address_type
);

/* Callback */
struct ble_msg_system_whitelist_append_rsp_t{
    uint16 result
}
void ble_rsp_system_whitelist_append(
    const struct ble_msg_system_whitelist_append_rsp_t * msg
)
```

### BGScript Functions

```
call system_whitelist_append(address, address_type)(result)
```

## Whitelist Clear

Delete all entries of the white list at once. Do not use this command while advertising or while being connected.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x0C	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x0C	method	Message ID

### C Functions

```
/* Function */
void ble_cmd_system_whitelist_clear(
    void
);

/* Callback */
void ble_rsp_system_whitelist_clear(
    const void *nul
)
```

### BGScript Functions

```
call system_whitelist_clear()
```

## Whitelist Remove

Remove an entry from the running white list. Do not use this command while advertising or while being connected.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x07	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x0B	method	Message ID
4 - 9	<b>bd_addr</b>	<b>address</b>	Bluetooth device address to remove from the running white list
10	<b>uint8</b>	<b>address_type</b>	Bluetooth address type

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x0B	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	

### C Functions

```
/* Function */
void ble_cmd_system_whitelist_remove(
    bd_addr address,
    uint8 address_type
);

/* Callback */
struct ble_msg_system_whitelist_remove_rsp_t{
    uint16 result
}
void ble_rsp_system_whitelist_remove(
    const struct ble_msg_system_whitelist_remove_rsp_t * msg
)
```

### BGScript Functions

```
call system_whitelist_remove(address, address_type)(result)
```



## 5.8.2 Enumerations

System class enumerations

### Endpoints

Data Endpoints used in data routing and interface configuration

**Table: VALUES**

Value	Name	Description
0	system_endpoint_api	Command Parser
1	system_endpoint_test	Radio Test
2	system_endpoint_script	BGScript (not used)
3	system_endpoint_usb	USB Interface
4	system_endpoint_uart0	USART 0
5	system_endpoint_uart1	USART 1

## 5.8.3 Events

System class events

### Boot

This event is produced when the device boots up and is ready to receive commands

This event is not sent over USB interface.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hilen	Message type: event
1	0x0C	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x00	method	Message ID
4 - 5	<b>uint16</b>	<b>major</b>	Major software version
6 - 7	<b>uint16</b>	<b>minor</b>	Minor software version
8 - 9	<b>uint16</b>	<b>patch</b>	Patch ID
10 - 11	<b>uint16</b>	<b>build</b>	Build version
12 - 13	<b>uint16</b>	<b>ll_version</b>	Link layer version
14	<b>uint8</b>	<b>protocol_version</b>	BGAPI protocol version
15	<b>uint8</b>	<b>hw</b>	Hardware version

#### C Functions

```
/* Callback */
struct ble_msg_system_boot_evt_t{
    uint16 major,
    uint16 minor,
    uint16 patch,
    uint16 build,
    uint16 ll_version,
    uint8 protocol_version,
    uint8 hw
}
void ble_evt_system_boot(
    const struct ble_msg_system_boot_evt_t * msg
)
```

#### BGScript Functions

```
event system_boot(major, minor, patch, build, ll_version, protocol_version, hw)
```

## Endpoint Watermark Rx

This event is generated if the receive (incoming) buffer of the endpoint has been filled with a number of bytes equal or higher than the value defined by the command `system_endpoint_set_watermarks`. Data from the receive buffer can then be read (and consequently cleared) with the command `system_endpoint_rx`.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x02	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x02	method	Message ID
4	<b>uint8</b>	<b>endpoint</b>	Endpoint index where data was received
5	<b>uint8</b>	<b>data</b>	Received data size

### C Functions

```
/* Callback */
struct ble_msg_system_endpoint_watermark_rx_evt_t{
    uint8 endpoint,
    uint8 data
}
void ble_evt_system_endpoint_watermark_rx(
    const struct ble_msg_system_endpoint_watermark_rx_evt_t * msg
)
```

### BGScript Functions

```
event system_endpoint_watermark_rx(endpoint, data)
```

## Endpoint Watermark Tx

This event is generated when the transmit (outgoing) buffer of the endpoint has free space for a number of bytes equal or higher than the value defined by the command `system_endpoint_set_watermarks`. When free space is enough, data can be sent out of the endpoint by the command `system_endpoint_tx`.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x02	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x03	method	Message ID
4	<b>uint8</b>	<b>endpoint</b>	Endpoint index where data was sent
5	<b>uint8</b>	<b>data</b>	Space available

### C Functions

```
/* Callback */
struct ble_msg_system_endpoint_watermark_tx_evt_t{
    uint8 endpoint,
    uint8 data
}
void ble_evt_system_endpoint_watermark_tx(
    const struct ble_msg_system_endpoint_watermark_tx_evt_t * msg
)
```

### BGScript Functions

```
event system_endpoint_watermark_tx(endpoint, data)
```

## No License Key

No valid license key found

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x00	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x05	method	Message ID

### C Functions

```
/* Callback *  
void ble_evt_system_no_license_key(  
    const void *nul  
)
```

### BGScript Functions

```
event system_no_license_ke)
```

## Protocol Error

Protocol error in command parser. In other words, this event is triggered in case a command from host has syntax error(s), or in case a command is sent only partially. In the latter case the timeout to wait for the command to be completely received is 1 second, then the partial command is discarded.

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x02	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x06	method	Message ID
4 - 5	<b>uint16</b>	<b>reason</b>	Reason for failure

### C Functions

```
/* Callback */
struct ble_msg_system_protocol_error_evt_t{
    uint16 reason
}
void ble_evt_system_protocol_error(
    const struct ble_msg_system_protocol_error_evt_t * msg
)
```

### BGScript Functions

```
event system_protocol_error(reason)
```

## Script Failure

Script failure detected

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x04	lolen	Minimum payload length
2	0x00	class	Message class: System
3	0x04	method	Message ID
4 - 5	<b>uint16</b>	<b>address</b>	Address where failure was detected
6 - 7	<b>uint16</b>	<b>reason</b>	Reason for failure

### C Functions

```
/* Callback */
struct ble_msg_system_script_failure_evt_t{
    uint16 address,
    uint16 reason
}
void ble_evt_system_script_failure(
    const struct ble_msg_system_script_failure_evt_t * msg
)
```

### BGScript Functions

```
event system_script_failure(address, reason)
```

## 5.9 Error Codes

This section describes the error codes the API commands may produce.

### 5.9.1 BGAPI Errors

Errors related to BGAPI protocol

#### **Invalid Parameter (0x0180)**

Command contained invalid parameter

#### **Device in Wrong State (0x0181)**

Device is in wrong state to receive command

#### **Out Of Memory (0x0182)**

Device has run out of memory



**Feature Not Implemented (0x0183)**

Feature is not implemented

**Command Not Recognized (0x0184)**

Command was not recognized

**Timeout (0x0185)**

Command or Procedure failed due to timeout

**Not Connected (0x0186)**

Connection handle passed is to command is not a valid handle

**flow (0x0187)**

Command would cause either underflow or overflow error

**User Attribute (0x0188)**

User attribute was accessed through API which is not supported

**Invalid License Key (0x0189)**

No valid license key found

**Command Too Long (0x018A)**

Command maximum length exceeded

**Out of Bonds (0x018B)**

Bonding procedure can't be started because device has no space left for bond.

**5.9.2 Bluetooth Errors**

Bluetooth errors

**Authentication Failure (0x0205)**

Pairing or authentication failed due to incorrect results in the pairing or authentication procedure. This could be due to an incorrect PIN or Link Key

**Pin or Key Missing (0x0206)**

Pairing failed because of missing PIN, or authentication failed because of missing Key.

### **Memory Capacity Exceeded (0x0207)**

Controller is out of memory.

### **Connection Timeout (0x0208)**

Link supervision timeout has expired.

### **Connection Limit Exceeded (0x0209)**

Controller is at limit of connections it can support.

### **Command Disallowed (0x020C)**

Command requested cannot be executed because the Controller is in a state where it cannot process this command at this time.

### **Invalid Command Parameters (0x0212)**

Command contained invalid parameters.

### **Remote User Terminated Connection (0x0213)**

User on the remote device terminated the connection.

### **Connection Terminated by Local Host (0x0216)**

Local device terminated the connection.

### **LL Response Timeout (0x0222)**

Connection terminated due to link-layer procedure timeout.

### **LL Instant Passed (0x0228)**

Received link-layer control packet where instant was in the past.

### **Controller Busy (0x023A)**

Operation was rejected because the controller is busy and unable to process the request.

### **Unacceptable Connection Interval (0x023B)**

The Unacceptable Connection Interval error code indicates that the remote device terminated the connection because of an unacceptable connection interval.

### **Directed Advertising Timeout (0x023C)**

Directed advertising completed without a connection being created.

### **MIC Failure (0x023D)**

Connection was terminated because the Message Integrity Check (MIC) failed on a received packet.

### **Connection Failed to be Established (0x023E)**

LL initiated a connection but the connection has failed to be established. Controller did not receive any packets from remote end.

## **5.9.3 Security Manager Protocol Errors**

Errors from Security Manager Protocol

**Passkey Entry Failed (0x0301)**

The user input of passkey failed, for example, the user cancelled the operation

**OOB Data is not available (0x0302)**

Out of Band data is not available for authentication

**Authentication Requirements (0x0303)**

The pairing procedure cannot be performed as authentication requirements cannot be met due to IO capabilities of one or both devices

**Confirm Value Failed (0x0304)**

The confirm value does not match the calculated compare value

**Pairing Not Supported (0x0305)**

Pairing is not supported by the device

**Encryption Key Size (0x0306)**

The resultant encryption key size is insufficient for the security requirements of this device

**Command Not Supported (0x0307)**

The SMP command received is not supported on this device

**Unspecified Reason (0x0308)**

Pairing failed due to an unspecified reason

### **Repeated Attempts (0x0309)**

Pairing or authentication procedure is disallowed because too little time has elapsed since last pairing request or security request

### **Invalid Parameters (0x030A)**

The Invalid Parameters error code indicates: the command length is invalid or a parameter is outside of the specified range.

## **5.9.4 Attribute Protocol Errors**

Errors from Attribute Protocol

### **Invalid Handle (0x0401)**

The attribute handle given was not valid on this server

### **Read Not Permitted (0x0402)**

The attribute cannot be read

### **Write Not Permitted (0x0403)**

The attribute cannot be written

**Invalid PDU (0x0404)**

The attribute PDU was invalid

**Insufficient Authentication (0x0405)**

The attribute requires authentication before it can be read or written.

**Request Not Supported (0x0406)**

Attribute Server does not support the request received from the client.

**Invalid Offset (0x0407)**

Offset specified was past the end of the attribute

**Insufficient Authorization (0x0408)**

The attribute requires authorization before it can be read or written.

**Prepare Queue Full (0x0409)**

Too many prepare writes have been queueud

**Attribute Not Found (0x040A)**

No attribute found within the given attribute handle range.

**Attribute Not Long (0x040B)**

The attribute cannot be read or written using the Read Blob Request

**Insufficient Encryption Key Size (0x040C)**

The Encryption Key Size used for encrypting this link is insufficient.

**Invalid Attribute Value Length (0x040D)**

The attribute value length is invalid for the operation

**Unlikely Error (0x040E)**

The attribute request that was requested has encountered an error that was unlikely, and therefore could not be completed as requested.

**Insufficient Encryption (0x040F)**

The attribute requires encryption before it can be read or written.

**Unsupported Group Type (0x0410)**

The attribute type is not a supported grouping attribute as defined by a higher layer specification.

**Insufficient Resources (0x0411)**

Insufficient Resources to complete the request

**Application Error Codes (0x0480)**

Application error code defined by a higher layer specification.

## 5.10 Device Firmware Upgrade

The commands and events in the dfu (Device firmware upgrade) class are only available when the module has been booted into DFU mode. See the reset command in the system class.

### 5.10.1 Commands

Device Firmware Upgrade commands

#### Flash Set Address

After re-booting into DFU mode, and with the UART bootloader currently installed ("bootuart" bootloader setting in the <boot> tag of the project.xml file), use this command to set the starting address for flashing. After this command is issued, send repeatedly the command `dfu_flash_upload` for the actual flashing.

Table: COMMAND

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x04	lolen	Minimum payload length
2	0x09	class	Message class: Device Firmware Upgrade
3	0x01	method	Message ID
4 - 7	<b>uint32</b>	<b>address</b>	The offset in the flash where to start flashing. Use the value 0x1000

Table: RESPONSE

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x09	class	Message class: Device Firmware Upgrade
3	0x01	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	

#### C Functions

```
/* Function */
void ble_cmd_dfu_flash_set_address(
    uint32 address
);

/* Callback */
struct ble_msg_dfu_flash_set_address_rsp_t{
    uint16 result
}
void ble_rsp_dfu_flash_set_address(
    const struct ble_msg_dfu_flash_set_address_rsp_t * msg
)
```

#### BGScript Functions

```
call dfu_flash_set_address(address)(result)
```

## Flash Upload

After setting the starting address with the `dfu_flash_set_address`, use this command repeatedly to upload the new binary firmware image to module over the UART interface. Address will be updated automatically. When all data is uploaded, use the `dfu_flash_upload_finish`.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x09	class	Message class: Device Firmware Upgrade
3	0x02	method	Message ID
4	<b>uint8array</b>	<b>data</b>	An array of data which will be written into the flash.

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x09	class	Message class: Device Firmware Upgrade
3	0x02	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	

### C Functions

```
/* Function */
void ble_cmd_dfu_flash_upload(
    uint8 data_len,
    const uint8* data_data
);

/* Callback */
struct ble_msg_dfu_flash_upload_rsp_t{
    uint16 result
}
void ble_rsp_dfu_flash_upload(
    const struct ble_msg_dfu_flash_upload_rsp_t * msg
)
```

### BGScript Functions

```
call dfu_flash_upload(data_len, data_data)(result)
```

## Flash Upload Finish

This command tells to the device that the uploading of DFU data has finished. Normally, after this command the `dfu_reset` is issued to restart the module in normal mode.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x09	class	Message class: Device Firmware Upgrade
3	0x03	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x09	class	Message class: Device Firmware Upgrade
3	0x03	method	Message ID
4 - 5	<b>uint16</b>	<b>result</b>	

### C Functions

```
/* Function */
void ble_cmd_dfu_flash_upload_finish(
    void
);

/* Callback */
struct ble_msg_dfu_flash_upload_finish_rsp_t{
    uint16 result
}
void ble_rsp_dfu_flash_upload_finish(
    const struct ble_msg_dfu_flash_upload_finish_rsp_t * msg
)
```

### BGScript Functions

```
call dfu_flash_upload_finish()(result)
```



## Reset

This command resets the module or the dongle. This command does not have a response, but triggers the boot event `system_boot` (or the `dfu_boot` when DFU mode is selected for modules with UART bootloader) after re-boot. Use boot mode 1 if you wish the module to enter the DFU mode after the reset, for re-flashing using the currently installed bootloader. There are three available bootloaders: USB for DFU upgrades using the USB-DFU protocol over the USB interface, UART for DFU upgrades using the BGAPI protocol over the UART interface, and OTA for the over-the-air upgrades.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x09	class	Message class: Device Firmware Upgrade
3	0x00	method	Message ID
4	<b>uint8</b>	<b>dfu</b>	Whether or not to boot into DFU mode:  0 = re-boot normally  1 = re-boot into DFU mode for communication with the currently installed bootloader

### C Functions

```
/* Function */  
void ble_cmd_dfu_reset(  
    uint8 dfu  
);
```

### BGScript Functions

```
call dfu_reset(dfu)
```

## 5.10.2 Events

Device Firmware Upgrade events

### Boot

Device booted up in dfu, and is ready to receive commands

**Table: EVENT**

Byte	Type	Name	Description
0	0x80	hlen	Message type: event
1	0x04	lolen	Minimum payload length
2	0x09	class	Message class: Device Firmware Upgrade
3	0x00	method	Message ID
4 - 7	<b>uint32</b>	<b>version</b>	

#### C Functions

```
/* Callback */
struct ble_msg_dfu_boot_evt_t{
    uint32 version
}
void ble_evt_dfu_boot(
    const struct ble_msg_dfu_boot_evt_t * msg
)
```

#### BGScript Functions

```
event dfu_boot(version)
```

## 5.11 Testing

### 5.11.1 Commands

#### Channel Mode

Set channel quality measurement mode

Table: COMMAND

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length
2	0x08	class	Message class: Testing
3	0x06	method	Message ID
4	<b>uint8</b>	<b>mode</b>	0- Last RSSI from packet 1-Accumulate error counter 2-Channel Sweep

Table: RESPONSE

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x08	class	Message class: Testing
3	0x06	method	Message ID

#### C Functions

```
/* Function */
void ble_cmd_test_channel_mode(
    uint8 mode
);

/* Callback */
void ble_rsp_test_channel_mode(
    const void *nul
)
```

#### BGScript Functions

```
call test_channel_mode(mode)
```

## Get Channel Map

Read measured channel quality map, returned list is of channel qualities for each data channel. Channel quality map is cleared after read.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x08	class	Message class: Testing
3	0x04	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: response
1	0x01	lolen	Minimum payload length
2	0x08	class	Message class: Testing
3	0x04	method	Message ID
4	<b>uint8array</b>	<b>channel_map</b>	Channel map measurements 37-bytes

### C Functions

```
/* Function */
void ble_cmd_test_get_channel_map(
    void
);

/* Callback */
struct ble_msg_test_get_channel_map_rsp_t{
    uint8 channel_map_len,
    const uint8* channel_map_data
}
void ble_rsp_test_get_channel_map(
    const struct ble_msg_test_get_channel_map_rsp_t * msg
)
```

### BGScript Functions

```
call test_get_channel_map()(channel_map_len, channel_map_data)
```

## Phy End

End test, and report received packets.

PHY - testing commands implement Direct test mode from BT Core, Volume 6, Part F.

These commands are meant to be used when testing against separate Bluetooth tester.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x08	class	Message class: Testing
3	0x02	method	Message ID

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x02	lolen	Minimum payload length
2	0x08	class	Message class: Testing
3	0x02	method	Message ID
4 - 5	<b>uint16</b>	<b>counter</b>	Received packet counter

### C Functions

```
/* Function */
void ble_cmd_test_phy_end(
    void
);

/* Callback */
struct ble_msg_test_phy_end_rsp_t{
    uint16 counter
}
void ble_rsp_test_phy_end(
    const struct ble_msg_test_phy_end_rsp_t * msg
)
```

### BGScript Functions

```
call test_phy_end()(counter)
```

## Phy Rx

Start receive test. Valid packets received can be read by phy\_end command

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x01	lolen	Minimum payload length

Byte	Type	Name	Description
2	0x08	class	Message class: Testing
3	0x01	method	Message ID
4	<b>uint8</b>	<b>channel</b>	channel = 0x00 - 0x27 channel is (Frequency-2402)/2 Frequency Range 2402 MHz to 2480 MHz

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x08	class	Message class: Testing
3	0x01	method	Message ID

#### C Functions

```

/* Function */
void ble_cmd_test_phy_rx(
    uint8 channel
);

/* Callback */
void ble_rsp_test_phy_rx(
    const void *nul
)

```

#### BGScript Functions

```

call test_phy_rx(channel)

```

## Phy Tx

Start packet transmission, send one packet at every 625us. If carrierwave is specified as type then just broadcasts carrier wave continuously.

**Table: COMMAND**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x03	lolen	Minimum payload length
2	0x08	class	Message class: Testing
3	0x00	method	Message ID
4	<b>uint8</b>	<b>channel</b>	channel = 0x00 - 0x27 channel is (Frequency-2402)/2 Frequency Range 2402 MHz to 2480 MHz
5	<b>uint8</b>	<b>length</b>	length = 0x00 - 0x25: Length in octets of payload data in each packet

Byte	Type	Name	Description
6	uint8	type	Packet Payload data contents <ul style="list-style-type: none"> <li>• 0=PRBS9 pseudorandom data</li> <li>• 1=11110000 sequence</li> <li>• 2=10101010 sequence</li> <li>• 3=broadcast carrier wave</li> </ul>

**Table: RESPONSE**

Byte	Type	Name	Description
0	0x00	hlen	Message type: command
1	0x00	lolen	Minimum payload length
2	0x08	class	Message class: Testing
3	0x00	method	Message ID

#### C Functions

```

/* Function */
void ble_cmd_test_phy_tx(
    uint8 channel,
    uint8 length,
    uint8 type
);

/* Callback */
void ble_rsp_test_phy_tx(
    const void *nul
)

```

#### BGScript Functions

```

call test_phy_tx(channel, length, type)

```

## Contact information

**Sales:** [sales@bluegiga.com](mailto:sales@bluegiga.com)

**Technical support:** <http://www.bluegiga.com/support/>

**Orders:** [orders@bluegiga.com](mailto:orders@bluegiga.com)

**WWW:** <http://www.bluegiga.com>

**Head Office / Finland:** Phone: +358-9-4355 060  
Fax: +358-9-4355 0660  
Sinikalliontie 5 A  
02630 ESPOO  
FINLAND

**Head address / Finland:** P.O. Box 120  
02631 ESPOO  
FINLAND

**Sales Office / USA:** Phone: +1 770 291 2181  
Fax: +1 770 291 2183  
Bluegiga Technologies, Inc.  
3235 Satellite Boulevard, Building 400, Suite 300  
Duluth, GA, 30096, USA

**Sales Office / Hong-Kong:** Phone: +852 3182 7321  
Fax: +852 3972 5777  
Bluegiga Technologies, Inc.  
Unit 10-18, 32/F, Tower 1, Millennium City 1,  
388 Kwun Tong Road, Kwun Tong, Kowloon,  
Hong Kong